

WD0704RE(A/C/D/F/G/H/Q/R/S/T/U/V/W/Z) WD0702RE(A/C/D/F/G/H/Q/R/S/T/U/V/W/Z) WD0654RE(A/C/D/F/G/H/Q/R/S/T/U/V/W/Z) WD0652RE(A/C/D/F/G/H/Q/R/S/T/U/V/W/Z) WD0604RE(A/C/D/F/G/H/Q/R/S/T/U/V/W/Z) WD0602RE(A/C/D/F/G/H/Q/R/S/T/U/V/W/Z)

Washing Machine user manual

imagine the possibilities

Thank you for purchasing this Samsung product. To receive a more complete service, please register your product at

www.samsung.com/register





features of your new samsung washing machine

Your new washing machine will change the way you feel about doing laundry. From its super-size capacity to its energy efficiency, the Samsung washing machine has all the features to turn a mundane chore into a pleasure.

Washing to drying with one button

Enjoy convenient non stop washing and drying managing. 3 different special drying programs can be selected to perform the whole wash cycle including the drying cycle using one button.

Cup Board(standard program), Low temp drying, Iron, Time Drying (30min ~ 180mins).
 Those drying programs also can be operated independently of washing programs.

Child Lock

The Child Lock function ensures that curious little hands are kept out of your washing machine.

This safety feature stops your children from playing with the operation of the washing machine, and alerts you when it is activated.

Wool Certified

The machine has been tested and passed the required Woolmark Company specification for machine washable wool products.

Fabrics should be washed according to the instructions on the garment label as specified by Woolmark and Samsung.

Delay End

Delay a cycle for up to 19 hours in one-hour increments and increase the convenience of using your washing machine especially when you have to go out.

Delicates Program

Special care can be determined by the appropriate temperature, the gentle wash action and the appropriate amount of water.

Ceramic Heater for Durability & Energy Saving (selected models)

Our truly innovative Ceramic Heater is twice as durable as regular heaters.

That saves you money on repairs. Plus, it eliminates the scale of hard water and save energy.







Air Wash

The Air Wash system deodorizes unpleasant smells and sterilizes the laundry that cannot be eliminated through a conventional washing system, a benefit of its unique air-washing mechanism.

- Air-washable: Woolen coats, cotton/down jumpers, sweaters, suits, pillows, cushions, needlework dolls
- Not applicable: leather, silk, velvet, electric blankets, other stained laundry

Digital Graphic Display

The Digital Graphic Display control panel is clear and easy to use for minimum fuss and hassle. And while it is easy to operate, the Digital Graphic Display enables you to make quick and accurate adjustments to your wash for excellent washing results.

Wide door

Extra wide door aperture for convenient viewing! Easily add and remove laundry, especially for large sized laundry items such as bedding, towels etc.

Direct Drive Motor

As the drum does not utilize belts or gears, vibrations are reduced significantly. This feature ensures that your washer machine is quieter and more durable.

This manual contains important information on the installation, use, and care of your new Samsung washing machine. Refer to it for descriptions of the control panel, instructions on how to use the washing machine, and tips for making the most of its state-of-the-art features and functions. The "Troubleshooting and information codes" section on page 35 tells you what to do if something goes wrong with your new washing machine.







safety information

Congratulations on your new Samsung ActivFresh™ washer. This manual contains important information on the installation, use and care of your appliance. Please take time to read this manual to take full advantage of your washer's many benefits and features.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance and retain it at a safe place near the appliance for your future reference. Use this appliance only for its intended purpose as described in this instruction manual.

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washer.

Because these following operating instructions cover various models, the characteristics of your washer may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

WARNING	Hazards or unsafe practices that may result in severe personal injury, death and/or property damage.
CAUTION	Hazards or unsafe practices that may result in personal injury and/or property damage .
CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:
	Do NOT attempt.
\mathbf{x}	Do NOT disassemble.
®	Do NOT touch.
*	Follow directions explicitly.
-	Unplug the power plug from the wall socket.
<u>_</u>	Make sure the machine is grounded to prevent electric shock.
	Call the service centre for help.
Ø	Note

These warning signs are here to prevent injury to you and others.

Please follow them explicitly.

After reading this section, keep it in a safe place for future reference.



Read all instructions before using the appliance.

As with any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

4_ safety information







2010-7-16 16:31:43





Do not let children (or pets) play on or in your washing machine. The washing machine door does not open easily from the inside, and children may be seriously injured if trapped inside.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

This appliance should be positioned to be accessible to the power plug, the water supply tabs and the drain pipes.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Use the new hose-sets and old hose-sets should not be reused.







satety intormatic

ALBANING SIGNS FOR INSTALLATION



The installation of this appliance must be performed by a qualified technician or service company.

Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The appliance is heavy, take care upon lifting it

Plug the power cord into an AC 220V/50Hz/15A wall socket or higher and use the socket for this appliance only. In addition, do not use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Failure Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.

If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.

When the appliance or power plug or power cord is damaged, contact your nearest service centre.



This appliance must be properly grounded.

Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.



Do not install this appliance near a heater, inflammable material.

Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops).

Do not install this appliance in a location of low temperature

- Frost may cause tubes to burst

Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Do not use an electric transformer.

- It may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.

Do not twist or tie the power cord.

6_ safety information







Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

Do not lay the power cord and tubes where you may fall over them.



ALLATION SIGNS FOR INSTALLATION



This appliance should be positioned in such a way that it is accessible to the power plug.

Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a level and hard floor that can support its weight.

Failure to do so may result in abnormal vibrations, moves, noise, or problems with the product.



SEVERE WARNING SIGNS FOR USING



If the appliance is flooded, cut the water supply and power immediately and contact your nearest service centre.

- Do not tough the power plug with wet hands
- Failure to do so may cause electric shock

If the appliance generates a strange noise, a burning smell or smoke, unplug the power plug immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washer. In addition, when disposing of the appliance, remove the washer door lever.

- If trapped inside, the child may become trapped and suffocate to death.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washer before using it.







satety information



Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other flammable or explosive substances.

- This may result in electric shock, fire or an explosion.

Do not open the washer door by force while it is operating (high-temperature washing/ drying/spinning).

- Water flowing out of the washer may result in burns or cause the floor to be slippery.

This may result in injury.

- Opening the door by force may result in damage to the product or injury.

Do not insert your hand under the washer.

- This may result in injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children or infirm persons use this washer unsupervised. Do not let children climb in the appliance

- Failure to do so may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washer while it is operating.

- This may result in injury.

Do not unplug the appliance by pulling at the power cord, always grip plug firmly and pull straight out from the outlet.

- Damage to the cord may cause short-circuit, fire and/or electric shock



Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use any fuse(such as cooper, steel wire, etc.) other than the standard fuse.
- When repairing or reinstalling the appliance is required, contact your nearest service
- Failure to do so may result in electric shock, fire, problems with the product, or injury.



If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

When the water supply hose comes loose from the faucet and floods the appliance, unplug the power plug.

- Failure to do so may result in electric shock or fire.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder/lightning storm.

- Failure to do so may result in electric shock or fire.



8_ safety information











CAUTION SIGNS FOR USING



When the washer is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washer using a damp and soft cloth.

- Failure to do so may result in discoloration, deformation, damage or rust.

The front glass may be broken by a strong impact. Take care when using the washer.

- When the glass is broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the faucet

Open the faucet slowly after a long period of non-use.

The air pressure in the water supply hose or the water pipe may result in damage to a part or in water leakage.

If a drain error occurs during an operation, check if there is a draining problem.

- If the washer is used when it is flooded because of a draining problem, it may result in electric shock or fire due to electric leakage.

Insert the laundry into the washer completely so that laundry does not get caught in the

- If laundry gets caught in the door, it may result in damage to the laundry or the washer, or result in water leakage.

Ensure that the faucet is turned off when the washer is not being used.

- Ensure that the screw on the water supply hose connector is properly tightened.
- Failure to do so may result in property damage or injury.

Check if the rubber seal is not contaminated by foreign substances (waste, thread, etc).

- If the door is not closed completely, it may result in water leakage.

Open the faucet and check if the water supply hose connector is firmly tightened and that there is no water leaking before using the product.

- If the screws or the water supply hose connector are loose, it may result in water

To reduce the risk of fire or explosion:

- Under certain conditions, hydrogen gas may be produced in a hot water system such as your hot water heater that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If your hot water system has not been used for two weeks or more, turn on all hot water taps in your home, and let the water flow for several minutes before using your washing machine. This will release any hydrogen gas build-up. Since hydrogen gas is flammable, do not smoke or light an open flame during this time. Ventilate immediately without touching the power plug if there is a gas leak.







safety information



Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the product, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.

 As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not place an object that generates a electromagnetic field near the washer.

- This may result in injury due to a malfunction.

Since the water drained during a high-temperature wash or drying cycle is hot, do not touch the water.

- This may result in burns or injury.

Do not wash, spin or dry water-proof seats, mats or clothing (*) unless your appliance has a special program for washing these items.

- Do not wash thick, hard mats even if the washer mark is on the care label.
- This may result in injury or damage to the washer, walls, floor or clothing due to abnormal vibrations.
- * Woollen bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle, car covers, etc.

Do not operate the washer when the detergent box is removed.

- This may result in electric shock or injury due to water leakage.

Do not touch the inside of the tub during or just after drying as it is hot.

- This may result in burns.

Do not insert your hand into the detergent box after opening it.

- This may result in injury as your hand may be caught by the detergent input device.Do not place any objects (such as shoes, food waste, animals) other than laundry into the washer.
- This may result in damage to the washer, or injury and death in the case of pets due to the abnormal vibrations.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.

- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.

- This may result in the rubber seal becoming deformed and water leakage.

Do not leave metal objects such as a safety pin or hair pin, or bleach in the tub for long periods of time.

- This may cause the tub to rust.
- If rust starts appearing on the surface of the tub, apply a cleansing agent (neutral) to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.

- This may result in spontaneous combustion or ignition due to the heat of the oxidation of the oil.

Do not use hot water from water cooling/heating devices.

- This may result in problems with the washer.







Do not use natural hand-washing soap for the washer.

- If it hardens and accumulates inside the washer, it may result in problems with the product, discoloration, rust or bad odors.

Do not wash large laundry items such as bedding in the washing net.

- Place socks and brassieres into the washing net and wash them with the other laundry.
- Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.

- If it accumulates inside the washer, it may result in water leakage.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Make sure that the pockets of all clothing to be washed are empty.

- Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons, or other heavy metal.

MARNING SIGNS FOR CLEANING



Do not clean the appliance by spraying water directly onto it. Do not use benzene, thinner or alcohol to clean the appliance.

- This may result in discoloration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

- Failure to do so may result in electric shock or fire.







contents

SETTING UP YOUR WASHING MACHINE	13 14 14 14 15 15 15 15	Checking the parts Meeting installation requirements Electrical supply and grounding Water Supply Drain Flooring Surrounding temperature Alcove or closet installation Installing your washing machine
WASHING A LOAD OF LAUNDRY	21 22 24 24 25 25 26 27 27 28 28 29 29	Washing for the first time Basic instructions Using the control panel Child lock Sound off Delay end Air Wash Using dry course Auto Drying Washing clothes using the cycle selector Washing clothes manually Laundry guidelines Detergent and additives information Which detergent to use Detergent drawer
CLEANING AND MAINTAINING YOUR WASHING MACHINE	31 31 32 33 34 34 34	Draining the washing machine in an emergency Cleaning the exterior Cleaning the detergent drawer and drawer recess Cleaning the debris filter Cleaning the water hose mesh filter Repairing a frozen washing machine Storing your washing machine
TROUBLESHOOTING AND INFORMATION CODES	35 36	Check these points if your washing machine Information codes
CYCLE CHART	37	Cycle chart

12_ contents

APPENDIX 38 Fabric care chart

38 Protecting the environment38 Declaration of conformity

39 Specifications




setting up your washing machine

Be sure to have your installer follow these instructions closely so that your new washing machine works properly and so that you're not at risk of injury when doing laundry.

CHECKING THE PARTS

Carefully unpack your washing machine, and make sure you've received all of the parts shown below. If your washing machine was damaged during shipping, or if you do not have all of the parts, contact Samsung Customer Service or your Samsung dealer.

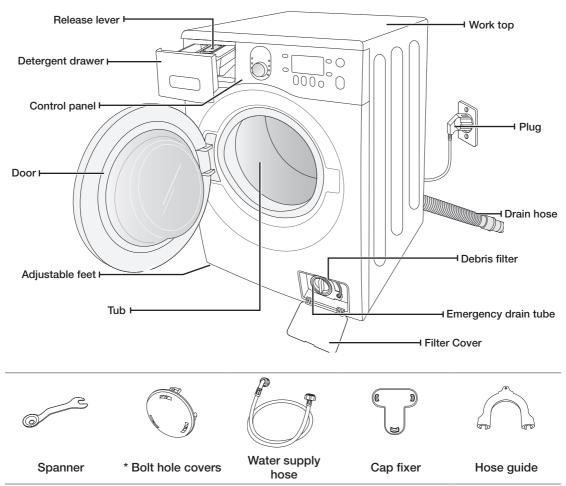



^{*} Bolt hole covers : The number of bolt hole covers depends on the model (3~5 covers).

setting up your new washing machine _13









setting up your washing machine

MEETING INSTALLATION REQUIREMENTS

Electrical supply and grounding

To prevent unnecessary risk of fire, electrical shock, or personal injury, all wiring and grounding must be done in accordance with the National Electrical Code ANSI/FNPA, No. 70 Latest Revision and local codes and ordinances. It is the personal responsibility of the appliance owner to provide adequate electrical service for this appliance.



Never use an extension cord.

WARNING Use only the power cord that comes with your washing machine.

When preparing for installation, ensure that your power supply offers:

- 220V~240V 50Hz 15 AMP fuse or circuit breaker
- Individual branch circuit serving only your washing machine

Your washing machine must be grounded. If your washing machine malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.

Your washing machine comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.



Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result electrical shock. Check with a qualified electrician or serviceman if you are unsure if the washing machine is properly grounded. Do not modify the plug provided with the washing machine. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Water Supply

Your washing machine will fill properly when your water pressure is 50 kPa ~ 800 kPa. Water pressure less than 50 kPa may cause water valve failure, not allowing the water valve to shut off completely. Or, it may take the washing machine longer to fill than what the controls allow, resulting in your washing machine turning off. (A fill-time limit, designed to prevent overflows/flooding if an internal hose becomes loose, is built into the controls.)

The water taps must be within 4 feet (122cm) of the back of your washing machine for the provided inlet hoses provided to reach your washing machine.



Most plumbing supply stores sell inlet hoses of various lengths up to 10 feet (305cm) long.

You can reduce the risk of leaks and water damage by:

- · Making water taps easily accessible.
- Turning off taps when the washing machine is not in use.
- Periodically checking for leaks at water inlet hose fittings.



14_ setting up your new washing machine

Before using your washing machine for the first time, check all connections at the water $_{NG}$ valve and taps for leaks.







Drain

Samsung recommends a standpipe height of 18 in (46 cm). The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached at the factory.

Flooring

For best performance, your washing machine must be installed on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are contributing factors to vibrations and the tendency for your washing machine to move slightly during the spin cycle.

Never install your washing machine on a platform or poorly supported structure.

Surrounding temperature

Do not install your washing machine in areas where water may freeze, since your washing machine always retains some water in its water valve, pump, and hose areas. Frozen water in the lines can cause damage to belts, the pump, and other components.

Alcove or closet installation

To operate safely and properly, your new washing machine requires minimum clearances of:

Sides - 25 mm Rear - 51 mm Top - 25 mm Front - 465 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 465 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

INSTALLING YOUR WASHING MACHINE

STEP 1

Selecting a location



Before you install the washing machine, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation
- Is away from direct sunlight
- Has adequate ventilation
- Will not be freezing (below 32 °F or 0 °C)
- Is away from heat sources such as oil or gas
- Has enough space so that the washing machine doesn't stand on its power cord








setting up your washing machine

STEP 2

Removing the shipping bolts

Before installing the washing machine, you must remove all shipping bolts from the back of the unit.


1. Loosen all the bolts with the supplied wrench.

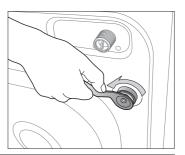

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.



3. Fill the holes with the supplied plastic covers.

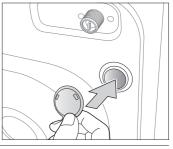

4. Store the shipping bolts away safely in case you have to move the washing machine in the future.

Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.






16_ setting up your new washing machine




STEP 3

Adjusting the levelling feet

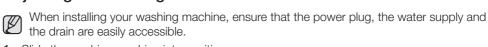

1. Slide the washing machine into position.

2. Level your washing machine by turning the leveling feet in and out as necessary by hand.

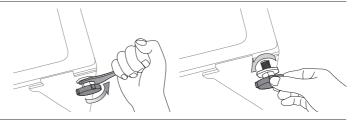

3. When your washing machine is level, tighten the nuts using the wrench supplied with your washing machine.



STEP 4

Connecting the water and drain


Connecting the water supply hose

1. Take the L-shaped arm fitting for the cold water supply hose and connect it to the cold water supply intake on the back of the machine. Tighten by hand.



The water supply hose must be connected to the washing machine at one end and to the water tap at the other. Do not stretch the water supply hose. If the hose is too short, replace the hose with a longer, high pressure

2. Connect the other end of the cold water supply hose to your sink's cold water tap and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

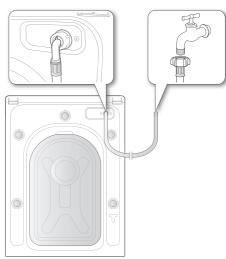

setting up your new washing machine _17

For selected models with an additional hot water intake:

- 1. Take the red L-shaped arm fitting for the hot water supply hose and connect it to the hot water supply intake on the back of the machine. Tighten by hand.
- 2. Connect the other end of the hot water supply hose to your sink's hot water tap and tighten it by hand.
- **3.** Use a Y-piece if you only want to use cold water.

WD0704RE-02829C_EN.indd 17 2010-7-16 16:31:48








setting up your washing machine

Connecting the water supply hose (selected models)

1. Remove the adaptor from the water supply hose.

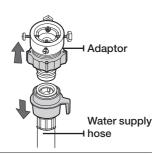


2. First, using a '+' type screwdriver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (2) following the arrow until there is a 5 mm gap.



3. Connect the adaptor to the water tap by tightening the screws firmly while lifting the adaptor upwards.


Turn part (2) following the arrow and connect (1) and (2).

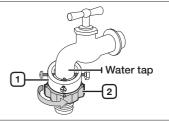


4. Connect the water supply hose to the adaptor. When you release part (3), the hose automatically connects to the adaptor making a 'click' sound.



After you have connected the water supply hose to the adaptor, ensure that it is connected correctly by pulling the water supply hose downwards.

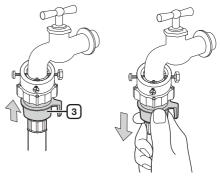

5. Connect the other end of the water supply hose to the inlet water valve at the rear of the washing machine. Screw the hose clockwise all the way in.

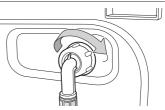


18_ setting up your new washing machine



6. Turn on the water supply and ensure that no water leaks from the water valve, tap or adaptor. If there is a water leaks, repeat the previous steps.

Do not use your washing machine if there is a water leak. WARNING This may cause electric shock or injury.

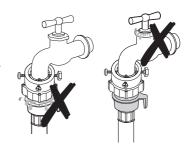

If the water tap has a screw type tap, connect the water supply hose to the tap as shown.



Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the spacing ring before inserting the tap into the adaptor.





setting up your new washing machine _19




setting up your washing machine

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

1. Over the edge of a wash basin: The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

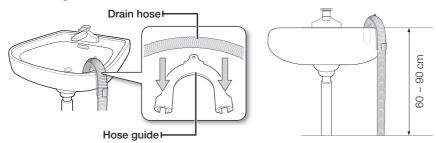


- 2. In a sink drain pipe branch: The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.
- **3.** In a drain pipe: We recommend using a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.



The standpipe drain requires;

- minimum diameter 5 cm.
- minimum carry-away capacity 60 liter per minute.

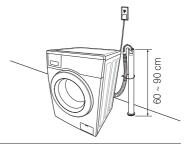

STEP 5

Powering your washing machine

Plug the power cord into a wall sockets, a 230 volt 50 Hz approved electrical outlet protected by a 15-amp fuse or comparable circuit breaker. (For more information on electrical and grounding requirements, see page 14.)







washing a load of laundry

With your new Samsung washing machine, the hardest part of doing laundry will be deciding which load to wash first.

WASHING FOR THE FIRST TIME



Before washing laundry for the first time, you must run a complete empty cycle (i.e. no laundry).

- **1.** Press the **Power** button.
- 2. Add a little detergent to the detergent compartment (II) in the detergent drawer.
- **3.** Turn on the water supply to the washing machine.
- 4. Press the Start/Pause button.



This will remove any water that might be left over in the machine from the manufacturer's test run.




Compartment ①: Detergent for prewash, or starch.

Compartment (11): Detergent for the main wash, water softener, pre-soaking agent, bleach and stain removal product.

Compartment ®: Additives, e.g. fabric softener or former (fill no higher than lower edge (MAX) of "A")

BASIC INSTRUCTIONS

1. Load your laundry into the washing machine.

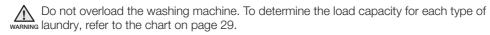



- Make sure that laundry is not caught in the door, as this may cause a water leak.
- Washing detergent may remain in the front rubber part of the washer after a wash cycle. Remove any remaining detergent, as they may cause a water leak.
- Do not wash water-proofed items.
- 2. Close the door until it latches.
- 3. Turn the power on.
- 4. Add detergent and additives to the dispenser drawer.
- **5.** Select the appropriate cycle and options for the load. The Wash Indicator light will illuminate and the estimated cycle time will appear in the display.
- 6. Press the Start/Pause button.








washing a load of laundry

USING THE CONTROL PANEL

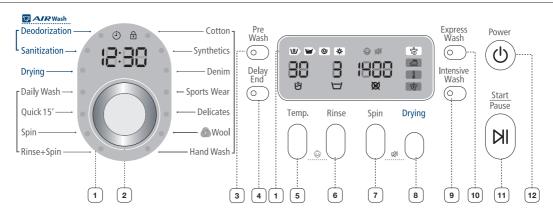

DIGITAL GRAPHIC DISPLAY

Displays the remaining wash cycle time, all cycle information, and error messages.

Select the tumble pattern and spin speed for the cycle.

For detailed information, refer to "Washing clothes using the cycle selector". (see page 27)

Cotton - For averagely or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc.

Synthetics - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends.

Denim - A higher water level in the main wash and extra rinse ensure that no washing powder remains that may mark your clothing.

Sports Wear - Use for water-proofed or proofed garments to keep their good looks and fresh feel.

Delicates - For sheer fabrics, brassieres, lingerie, dresses, shirts and blouses. For best results, use liquid detergent.

Wool - Only for machine-washable wool. A load should be less than 2.0 kg.

- The wool course washes the laundry using gentle cradling actions.
 During the wash, the gentle cradling and soaking actions are continued to protect the wool fibers from shrinkage / distortion and for a super gentle clean. This stop operation is not a problem.
- Neutral detergent is recommended for wool course, for improved washing results and for improved care of the wool fibers.




The wool wash cycle of this machine has been approved by Woolmark for the washing of machine-washable Woolmark products provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine, M1010 (Certificate Number issued by IWS NOM INEE Co., Ltd.)

Handwash - A very light wash cycle as gentle as a hand wash. **AIR Wash** - This course is useful for removing bad odors. Turning the Cycle Selector cycles through the following operating modes.

(Deodorization → Sanitization)

- Deodorization Reduces bad smells from the laundry
- Sanitization Deodorize and sterilize the laundry by stronger air wash action with higher temp.



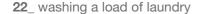



	Drying - Select to dry laundry automatically by detecting the amount and weight of the laundry. Daily Wash - Use for everyday items such as underwear and shirts. Quick 15' - For lightly soiled garments that you require quickly. Spin - Performs an additional spin cycle to remove more water. Rinse + Spin - Use for a load that needs rinsing only or to add rinseadded fabric softener to a load.		
PRE WASH SELECTION BUTTON	Press this button to select pre wash.		
DELAY END SELECTION BUTTON	Press this button repeatedly to cycle options (from 3 hours to 19 hours in a The hour displayed indicates the time		
TEMP. SELECTION BUTTON	Press this button repeatedly to cycle temperature options: (Cold Water 🖱		
6 RINSE SELECTION BUTTON	Press this button to add additional rinse cycles. The maximum number of rinse cycles is five.		
	Press the button repeatedly to cycle through the available speeds for the spin cycle.		
	WD0704/WD0654/WD0604	<u></u> , <u>⊗</u> , 400, 800, 1200, 1400 rpm	
7 SPIN SELECTION BUTTON	WD0702/WD0652/WD0602	─/, Ø, 400, 800, 1000, 1200 rpm	
_ Berreit	"No spin '' - The laundry remains in the drum and no spin cycle is performed after the final drain. "Rinse Hold '' - The laundry remains soaking in the final rinse water. Before the laundry can be unloaded, either a Drain or Spin cycle must be performed.		
8 DRYING SELECTION BUTTON	Pressing the button cycles through the following options. Cup Board ♂→ Low Temp. ♣→ Iron △→ Time Dry ♂ (30min. → 1:00min. → 1:30min. → 2:00min. → 2:30min. → 3:00min.) → Cup Board "Cup Board ♂ " - Use this cycle to dry loads such as cotton, underwear, and linen. "Low Temp. ♣" - This cycle protect heat-sensitive items at a low drying temperature. "Iron △" - Finishes the dry cycle in a moist state appropriate for Ironing. "Time Dry ♂ " -Dry the laundry for the specified period of time. • You must avoid washing laundry that may not be dried as it may be deformed even at low temperatures. • The Cup Board, Low Temp, Iron and Time Dry options detect the weight of the laundry in order to display an accurate drying time and dry them more completely. • The drying conditions may differ depending on the type and the		
9 INTENSIVE WASH SELECTION BUTTON	amount of laundry. Press this button when the laundry is heavily soiled and needs to be		
EXPRESS WASH SELECTION BUTTON	washed intensively. The cycle time is increased for each cycle. Press this button to select Exprss Wash. Exprss Wash is only available with cotton course. Press this button repeatedly to cycle through the wash time options:(15, 20,30,40,50,60min). • The actual operation time of Express Wash may delay at most 10 minutes according to weight of the laundry.		

washing a load of laundry _23



WD0704RE-02829C_EN.indd 23



washing a load of laundry

START/PAUSE SELECTION BUTTON	Press to pause and restart a cycle.
12 POWER BUTTON	Press it once to turn your washing machine on, press it again to turn your washing machine off. If the washing machine is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

Child lock


The Child Lock function allows you to lock the buttons so that the wash cycle you've chosen can't be changed.

Activating/Deactivating

If you want to activate or deactivate the Child Lock function, press the **Temp.** and **Rinse** buttons at the same time for 3 seconds. "Child Lock "will be lit when this feature is activated.



When the Child Lock function is activated, only the **Power** button works. The Child Lock function remains on even after the power is turned on and off or after the disconnecting and reconnecting the power cord.

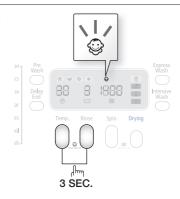

Sound off

The Sound Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivating

If you want to activate or deactivate the Sound Off function, press the **Spin** and **Drying** buttons at the same time for 3 seconds. The "Sound Off " will be lit when this feature is activated.

Pre Wash Delay End Spin Drying Temp. Rinse Spin Drying 3 SEC.

Delay End

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 3 to 19 hours (in 1 hour increments). The hour displayed indicates the time at which the wash will be finished.

- **1.** Manually or automatically set your washing machine according to the type of laundry you are washing.
- 2. Press the **Delay End** button repeatedly until the delay time is set.
- 3. Press the **Start/Pause** button. The "Delay End (2)" indicator will be lit, and the clock will begin counting down until it reaches the set time.
- **4.** To cancel a Delay End function, press the **Power** button and then turn the washing machine on again.

24_ washing a load of laundry



Drain Only Fuction

When you want just drain water from washing machine, follow directions below.

- 1. Press the Power button
- 2. Turn the Cycle Selector to the Spin positio.
- 3. Press the Spin button 1 times until rpm sign is off.
- 4. Then "1" shows up on time display in center.
- 5. Press the Start/Pause button.

Air Wash

Air Wash can refresh laundry without using water owing to its powerful airing system. Clothing that can be refreshed includes woolen coats, cotton or jumpers, sweaters and suits. (Two items or less (less than 1 kg))

- 1. Open the door, place the laundry into the washing machine and close the door.
- 2. Press the **Power** button.
- 3. Select Air Wash by turning the Cycle Selector.
 - Each time the button is pressed, the operating mode cycles through the following sequence: Deodorization, Sanitization ...

MODE	CYCLE TIME
Deodorization	29 min
Sanitization	59 min

- When one of these options has been selected, no other button can be selected and you can only select the delay end time from between 3:00 – 19:00.
- **4.** Close the door and press the **Start/Pause** button.



- When there is water in the tub, Air Wash cannot be selected. Drain the water and select Air Wash.
- Press the **Start/Pause** or **Power** button to remove the laundry.
- Fragrance or dryer sheets can be used with Air Wash programs to add fragrance to your refreshed laundry (one sheet per one or two items).



WD0704RE-02829C_EN.indd 25

Avoid Air Wash the following clothes:

- Sensitive clothes made of leather, mink, fur, silk, etc.
- · Underwear trimmed with lace, 'glued' doll cushions, and dress suits may have their decorations loosened.
- Clothes trimmed with buttons can cause them to break.
- Starchy clothes can become deformed.
- · Hard bedding such as a wooden pillows (neck-rest)
 - Pillows or blankets filled with plastic or starch rather than cotton
 - Electric blankets
- Furry blankets
- Bulky blankets
- Latex pillow





2010-7-16 16:32:01



washing a load of laundry

USING DRY COURSE

Refer to the label of drying capacity and be sure to put in the clothes to the lower level than the marked line for the dried clothe of 3.5kg (or 3.0kg(selected models)).

- 1. Open the door, put in the clothes and close the door again.
- 2. Press the **Power** button and then press the **Drying** button.
 - : The standard course will be selected automatically.

Drying is availably selected only at the courses such as Cotton, Synthetics, Denim, Sports Wear, Daily Wash, Quick 15', Spin and Rinse+Spin. (Put suitable amount of detergent and fiber softener in the detergent tray and close it again.)

3. Select **Drying** button as follows.

Drying Programs

Drying Type		Information	Max Load	Time (Max Load)
Auto Drying	Cup Board(竣)	Standard: Dries the laundry.	3.5 kg	160 min.
	Low Temp.()	Dries the laundry at a low temperature to protect the texture of the laundry.	2.0 kg	210 min.
	Iron(<u></u>	For leaving items partially damp so that it can be easily ironed	2.0 kg	140 min.
Time Drying(형)		You can select the appropriate drying time depending on the texture, quantity, and moisture.	3.5 kg	180 min.

- It automatically displays Drying Time by sensing the weight of clothes before drying for increasing the drying effect.
- For laundry weighing less than 3.5kg, use the Auto Dry. For laundry that weighs more, please use the Time Dry.
- If both the spin and drying cycles are selected, the spin speed is automatically selected to enhance the drying efficiency.
- When using the drying cycle, check if the water supply valve is opened.
- 4. Press Start/Pause button.
 - : It automatically performs an optimal function from washing to drying.
 - The selected course can't be altered after the start of drying.
 - If you select Drying function, the intensity of SPIN will be set up as High in default for increasing the drying effect.
 - If cold water is not supplied, drying will not be performed.
 - If you do not take out clothes from the tub after the end of drying, a function of wrinkle protection will be performed for about 30 minutes with the display of [End]. In order to take out the clothes: press firstly Start/Pause or Power button and take them out.
 - In case you wish to dry after hand washing, select both Spin and Dry at the same time.







Auto Drying

Samsung's brand-new technology, outstanding Auto Dry can apperceive the condition of your drying clothes, and decide automatically when to stop, bringing convienence to your life.



Cup Board 슣, Low Temp. 🌡 and Iron 🚄 all use Auto Dry technology, and will automatically stop drying "Just in Time".

- Just in Time: At the very time when your clothes are dry, the machine apperceives it and stops drying, preventing damage to clothes caused by over-drying. The drying time will be adjusted accordingly during the course.
- For example, if the machine apperceives clothes are dry 50min after the 160min course
 of Cup Board starts, it will stop drying right away and start cooling course, with the
 display showing 10min instead of 110min. After cooling, the display shows End and the
 whole course ends.

Washing clothes using the cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

- 1. Turn on your sink's water tap.
- 2. Press the Power button.
- 3. Open the door.
- 4. Load the articles one at a time loosely into the drum, without overfilling it.
- 5. Close the door.
- Add detergent, softener, and pre-wash detergent (if necessary) into the appropriate compartments.



Pre-wash is only available when selecting the Cotton, Synthetics, Denim, Sports Wear, Daily Wash cycles. It is only necessary if your clothing is heavily soiled.

- Use the **Cycle Selector** to select the appropriate cycle according to the type of material: Cotton, Synthetics, Denim, Sports Wear, Delicates, Wool, Hand Wash, Daily Wash, Quick
- 15', Spin, Rinse+Spin. The relevant indicators will illuminate on the control panel.8. At this time, you can control the wash temperature, the amount of rinses, the spinning speed, and the delay time by pressing the appropriate option button.
- 9. Press the **Start/Pause** button and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Pause Option

Within 5 minutes of starting a wash, it is possible to add/remove laundry items.

- 1. Press the **Start/Pause** button to unlock the door.
- The dear connet be append when the water is t
- The door cannot be opened when the water is too HOT or the water level is too HIGH.
- 2. After closing the door, press the **Start/Pause** button to restart the wash.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

- 1. Open the door.
- 2. Remove laundry.







washing a load of laundry

Washing clothes manually

You can wash clothes manually without using the Cycle Selector.

- 1. Turn the water supply on.
- 2. Press the **Power** button on the washing machine.
- 3. Open the door.
- 4. Load the articles loosely into the drum one at a time, without overfilling it.
- 5. Close the door.
- Add detergent and, if necessary, softener or prewash detergent, into the appropriate compartments.
- 7. Press the **Temp.** button to select the temperature. (Cold water, 30 °C, 40 °C, 60 °C, 95 °C)
- **8.** Press the **Rinse** button to select the required number of rinse cycles. The maximum number of rinse cycles is five.
 - The wash duration is increased accordingly.
- 9. Press the **Spin** button to select the spin speed.
- The rinse hold function allows you to remove items that are still wet from the washing machine. (

 : No Spin,
 : Rinse Hold)
- **10.** Press the **Delay End** button repeatedly to cycle through the available Delay End options (from 3 hour to 19 hours in one hour increments). The hour displayed indicates the time at which the wash will be finished.
- 11. Press the Start/Pause button and the machine will begin the cycle.

LAUNDRY GUIDELINES

Follow these simple guidelines for the cleanest laundry and the most efficient wash.



Always check the Care label on clothing before washing.

Sort and wash your laundry according to the following criteria:

- Care Label: Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayons.
- Colour: Divide whites and colours. Wash new colour items separately.
- Size: Placing items of different sizes in the same load will improve the wash action.
- Sensitivity: Wash delicate items separately, using the Delicate wash cycle for pure, new woollen items, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

Emptying pockets

Before each wash, empty all the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal objects. Metal on clothing may damage your clothing as well as the tub. Turn clothing with buttons and embroidered clothes inside out before washing them. If zips of pants and jackets are open while washing, the spin basket may be damaged. Zips should be closed and fixed with a string before washing. Clothing with long strings may become entangled with other clothes damaging them. Be sure to fix the strings before starting the wash.

Prewashing cotton

Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, prewash with a protein-based detergent.

2010-7-16 16:32:02

Determining the load capacity

Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.







Fabric Type	Load Capacity		
Model	WD0704/WD0702	WD0654/WD0652	WD0604/WD0602
Cotton - average/lightly soiled - heavily soiled	7.0 kg	6.5 kg	6.0 kg
Synthetics	3.0 kg	3.0 kg	3.0 kg
Sports Wear	2.5 kg	2.5 kg	2.5 kg
Delicates	2.5 kg	2.5 kg	2.5 kg
Wool	2.0 kg	2.0 kg	2.0 kg



- When the laundry is unbalanced ("UE" lights up on the display), redistribute the load. If the laundry is unbalanced, the spin efficiency may be degraded.
- When washing Bedding or Duvets, the wash time may be lengthened or the spin efficiency may be degraded.



Make sure to insert brassieres (water washable) into a laundry net (to be purchased additionally).

- The metal parts of the brassieres may break through the material and damage the laundry. Therefore make sure to place them inside a fine laundry
- Small, light clothing such as socks, gloves, stockings and handkerchiefs may become caught around the door. Place them inside a fine laundry net.



Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and cause an accident resulting in injury.

DETERGENT AND ADDITIVES INFORMATION

Which detergent to use

The type of detergent you should use is based on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use "low suds" laundry detergent, which is designed for automatic washing machines.

Follow the detergent manufacturer's recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, enquire at your local water authority.



Do not use detergent that has hardended or solidified as the detergent may remain in the rinse cycle. It may cause your washing machine to not rinse properly or result in the overflow becoming blocked.



Please note the following when using the Wool course.

- Use a neutral liquid detergent for wool only.
- · When using a powder detergent, it may remain on the laundry and cause damage to the material (wool).








washing a load of laundry

Detergent drawer


Your washing machine has separate compartments for dispensing detergent and fabric softener. Add all laundry additives to the correct compartment before starting your washing machine.

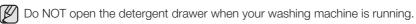


- 1. Pull out the detergent drawer on the left side of the control panel.
- 2. Add the recommended amount of laundry detergent directly into the detergent compartment (11) before starting your washing machine.
- **3.** Add the recommended amount of fabric softener into the softener compartment **(**)** if required.


Do NOT add any powder/liquid **detergent** to the softener cautioncompartment (®).



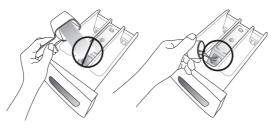

- **4.** When using the Prewash option, add the recommended amount of laundry detergent into the prewash compartment ①.
- When washing large items do NOT use the following detergetnt types.
 - Tablet and capsule type detergents
 - Detergents using a ball and net

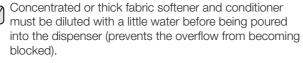

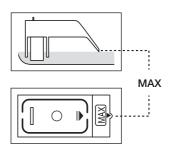



Be careful that the fabric softener does not overflow, when you close the detergent drawer after adding fabric softener into the rinse detergent compartment.



30_ washing a load of laundry




cleaning and maintaining your washing machine

Keeping your washing machine clean improves its performance, wards off unnecessary repairs, and lengthens its life.

DRAINING THE WASHING MACHINE IN AN EMERGENCY


- 1. Unplug the washing machine from the power supply.
- 2. Open the filter cover using a coin or a key.

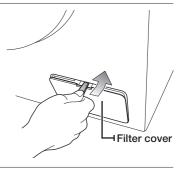


3. Unscrew the emergency drain cap by turning it to the left.



- **4.** Hold the cap on the end of the emergency drain tube and slowly pull it out about 15 cm.
- **5.** Allow all the water to flow into a bowl.

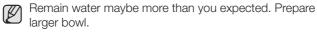

- 6. Reinsert the drain tube and screw the cap back on.
- 7. Replace the filter-cover.

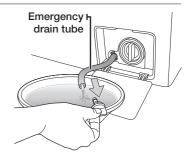

cleaning and maintaining your washing machine _31

CLEANING THE EXTERIOR

WD0704RE-02829C_EN.indd 31

- 1. Wipe the washing machine surfaces, including the control panel, with a soft cloth using a nonabrasive household detergent.
- 2. Use a soft cloth to dry the surfaces.
- **3.** Do not pour water onto the washing machine.











cleaning and maintaining your washing machine

CLEANING THE DETERGENT DRAWER AND DRAWER RECESS

- **1.** Press the release lever on the inside of the detergent drawer and pull the drawer out.
- 2. Remove the liquid detergent divider from the detergent drawer

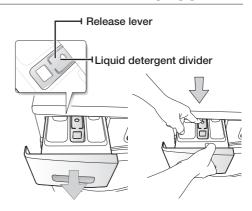

3. Wash all parts under running water.

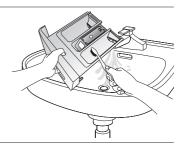

- **4.** Clean the drawer recess with an old toothbrush.
- **5.** Replace the liquid detergent divider by pushing it firmly into the drawer.
- 6. Push the drawer back into place.

32_ cleaning and maintaining your washing machine

7. To remove any remaining detergent, perform a rinse cycle without any laundry in the drum.








cleaning and maintaining your

CLEANING THE DEBRIS FILTER

We recommend cleaning the debris filter 5 or 6 times a year, or when the error message of "5E" is displayed. (Refer to "Draining the washing machine in an emergency" in the previous page.)

Before cleaning the debris filter, make sure to unplug the power cord.

1. Remove the remaining water first (refer to "Draining the washing machine in an emergency" on page 29.)

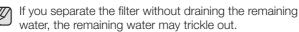

- 2. Open the filter cover by using a key or coin.
- 3. Unscrew the emergency drain cap by turning it to the left and drain off all the water.
- 4. Unscrew the debris filter cap.



- 6. Replace the debris filter cap.
- 7. Replace the filter cover.




Do not open the debris filter cap while the machine is running or hot CAUTION water may flow out.



- Make sure to replace the filter cap after the filter cleaning. If the filter is out of the machine, your washing machine may malfunction or leak water.
- The filter should be fully assembled after the filter cleaning.



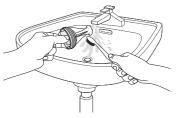








cleaning and maintaining your washing machine

CLEANING THE WATER HOSE MESH FILTER

You should clean the water hose mesh filter at least once a year, or when the error message of "4E" is displayed:

- **1.** Turn off the water supply to the washing machine.
- 2. Unscrew the hose from the back of the washing machine. To prevent water from gushing out due to the air pressure in the hose, cover the hose with a cloth.
- **3.** Gently pull out the mesh filter from the end of the hose using a pair of pliers and rinse it under water until clean. Also clean inside and outside the threaded connector.
- **4.** Push the filter back into place.
- 5. Screw the hose back onto the washing machine.
- 6. Make sure the connections are watertight and turn on the tap.

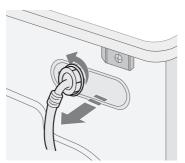



REPAIRING A FROZEN WASHING MACHINE

If the temperature drops below freezing and your washing machine is frozen:

- 1. Unplug the washing machine.
- 2. Pour warm water over the tap to loosen the water supply hose.
- 3. Remove the water supply hose and soak it in warm water.
- 4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
- 5. Reconnect the water supply hose to the water tap and check if the water supply and drain are operating normal.

STORING YOUR WASHING MACHINE

If you need to store your washing machine for an extended time, it's better to drain and disconnect it. Washing machines can be damaged if water is left in the hoses and internal components before storage.

- 1. Select the Quick 29' cycle and add bleach to the bleach compartment. Run your washing machine through the cycle without a load.
- 2. Turn the water taps off and disconnect the inlet hoses.
- **3.** Unplug your washing machine from the electrical outlet, and leave your washing machine door open to allow air to circulate inside the tumbler.
- If your washing machine has been stored in below-freezing temperatures, allow time for any leftover water in your washing machine to thaw out before using it.



troubleshooting and information codes

CHECK THESE POINTS IF YOUR WASHING MACHINE...

PROBLEM	SOLUTION
Will not start	 Make sure your washing machine is plugged in. Make sure the door is firmly closed. Make sure the water source tap(s) are turned on. Make sure to press the Start/Pause button.
Has no water or not enough water	 Turn the water tap on fully. Make sure the water source hose is not frozen. Straighten the water intake hoses. Clean the filter on the water intake hose.
Has detergent remains in the detergent drawer after the wash cycle is complete	 Make sure your washing machine is running with sufficient water pressure. Make sure the detergent is added to the center of the detergent drawer.
Vibrates or is too noisy	 Make sure your washing machine is on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance. Make sure that the shipping bolts are removed. Make sure your washing machine is not touching any other object. Make sure the laundry load is balanced.
The washing machine does not drain and/or spin	Straighten the drain hose. Eliminate kinked hoses.Make sure the debris filter is not clogged.
Door is locked shut or will not open.	 Make sure all the water in your drum is drained out. Make sure the door lock light is off. Door lock light will off after drained.

If the problem persists, contact your local Samsung Customer Service.





troubleshooting and information codes _35



troubleshooting and information codes

INFORMATION CODES

When your washing machine malfunctions, you may see an information code on the display. If that happens, check this table and try the suggested solution before calling Customer Service.

CODE SYMBOL	SOLUTION
dE	Close the door.
4E	Make sure the source water tap is turned on.Check the water pressure.
5E	Clean the debris filter.Make sure the drainage hose is installed correctly.
UE	The laundry load is unbalanced. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory and an "UE" error message will be shown in the display window.
cE/3E	Call the after-sales service.
Hot	It appears when the internal temperature of the drum is high. The fan will automatically function, so just wait until "Hot" indication disappeared.
Sd/Sud	This occurs when too much foaming is detected. It is also displayed while foaming is removed. When the removal is finished, the normal cycle proceeds. (This is one of the normal operations. It is an error for preventing non-sensing faults.)
Uc	 If the voltage of the supplied power is instable, the washing machine will be paused to protect its electric devices. If the correct voltage is supplied, the cycle will resume automatically.

For any codes not listed above, or if the suggested solution doesn't fix the problem, call your Samsung Service Centre or local Samsung dealer.







cycle chart

CYCLE CHART

(• user option)

		Max load(kg)		DETERGENT			Max Temp
PROGRAM	WD0704/WD0702	WD0654/WD0652	WD0604/WD0602	Pre Wash	Wash	Softener	(°C)
Cotton	7.0	6.5	6.0	•	yes	•	95
Synthetics	3.0	3.0	3.0	•	yes	•	60
Denim	3.0	3.0	3.0	•	yes	•	60
Sports Wear	2.5	2.5	2.5	•	yes	•	60
Delicates	2.5	2.5	2.5	-	yes	•	40
Wool	2.0	2.0	2.0	-	yes	•	40
Handwash	2.0	2.0	2.0	-	yes	•	40
Deodorization	1.0	1.0	1.0	-	-	-	-
Sanitization	1.0	1.0	1.0	-	-	-	-
Drying	3.5	3.5	3.5	-	-	-	-
Daily Wash	3.0	3.0	3.0	•	yes	•	60
Quick 15'	3.0	3.0	3.0	-	yes	•	60

	Spin Speed	d(MAX) rpm	Intensive		Cycle time
PROGRAM	WD0704/WD0654/WD0604	WD0702/WD0652/WD0602	Wash	Delay End	(min)
Cotton	1400	1200	•	•	120
Synthetics	1200	1200	•	•	90
Denim	800	800	•	•	78
Sports Wear	1200	1200	•	•	72
Delicates	800	800	-	•	50
Wool	800	800	-	•	38
Handwash	400	400	-	•	31
Deodorization	-	-	-	•	29
Sanitization	-	-	-	•	59
Drying	-	-	-	•	160
Daily Wash	1200	1200	-	•	70
Quick 15'	800	800	-	•	15

- 1. A cycle with a prewash takes approx. 15 minutes longer.
- 2. The cycle duration data has been measured under the conditions specified in Standard IEC 60456 / EN 60456.
- **3.** COTTON 60°C+INTENSIVE is a program with the EN60456 specifications.
- **4.** Course time in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.
- 5. When the Intensive Wash function is selected, the cycle time is increased for each cycle.









appendix

FABRIC CARE CHART

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing, and dry cleaning when necessary.

The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundering problems.

	Resistant material		Can be ironed at 100 °C max
\square	Delicate fabric	M	Do not iron
95 95	Item may be washed at 95 °C	A	Can be dry cleaned using any solvent
60 60	Item may be washed at 60 °C	P	Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
40 40	Item may be washed at 40 °C	F	Dry clean with aviation fuel, pure alcohol or R113 only
30 30	Item may be washed at 30 °C	\otimes	Do not dry clean
\(\tau_{\tau}\)	Item may be hand washed		Dry flat
\bowtie	Dry clean only		Can be hung to dry
<u> </u>	Can be bleached in cold water		Dry on clothes hanger
X	Do not bleach	<u></u>	Tumble dry, normal heat
	Can be ironed at 200 °C max	<u></u>	Tumble dry, reduced heat
	Can be ironed at 150 °C max		Do not tumble dry

PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manu-facturers' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.







SPECIFICATIONS

TYPE				FRONT	LOADING V	VASHING MA	ACHINE		
DIMENIOLOMO			WD070)4/WD0702	WD0654	WD0652 WD0604/WD0602		WD0602	
DIMENSIONS				W5:	98mm X D61	10mm X H846mm			
WATER PRESSURE					50 kPa ~	800 kPa			
WATER VOLUME			WD070)4/WD0702	WD0654	WD0652	WD0604	WD0602	
WATER VOLUME				75 l	75	5 ℓ	72	2 (
NET WEIGHT			WD070)4/WD0702	WD0654.	WD0652	WD0604	WD0602	
NET WEIGHT			6	65 kg	65	kg	65	kg	
WASH AND SPIN CA	APACI	TY	7.0 kg (DF	RY LAUNDRY)	6.5 kg (DRY	LAUNDRY)	6.0 kg (DRY	LAUNDRY)	
DRY CAPACITY			3	.5 kg	3.5	kg	3.0	3.0 kg	
	M	ODEL	WD070)4/WD0702	WD0654	WD0652	WD0604/WD0602		
	10/04	SHING	220 V	150 W	150	0 W 150 V) W	
	VVA	SI IIING	240 V	150 W	150) W	150) W	
POWER		SH AND	220 V	2000 W	200	0 W	2000 W		
CONSUMPTION	HE	ATING	240 V	2400 W	240	0 W	240	0 W	
	SPIN	MODEL	WD0704	WD0702	WD0654	WD0652	WD0604	WD0602	
	SFIIN	230 V	350 W	300 W	350 W	300 W	350 W	300 W	
	PUN	MPING			34	W			
	M	ODEL	WD070)4/WD0702	WD0654	/WD0652 WD0604/WD0602		WD0602	
PACKAGE WEIGHT	PA	NPER	2	.1 kg	2.1	kg 2.1 kg		kg	
	PL	ASTIC	1	.1 kg	1.1	kg 1.1 kg		kg	
SPIN	M	ODEL	WDC)704/WD0654/W	/D0604	WD07	02/WD0652/W	D0602	
REVOLUTIONS	r	pm		1400		1200			

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.









QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com

Code No. DC68-02829C_EN



WD0704RE(A/C/D/F/G/H/Q/R/S/T/U/V/W/Z)
WD0702RE(A/C/D/F/G/H/Q/R/S/T/U/V/W/Z)
WD0654RE(A/C/D/F/G/H/Q/R/S/T/U/V/W/Z)
WD0652RE(A/C/D/F/G/H/Q/R/S/T/U/V/W/Z)
WD0604RE(A/C/D/F/G/H/Q/R/S/T/U/V/W/Z)
WD0602RE(A/C/D/F/G/H/Q/R/S/T/U/V/W/Z)

الغسالة دليل المستخدم

إمكانيات هائلة

نشكرك على شراء هذا المنتج من Samsung. للحصول على خدمة أكثر تكاملاً, الرجاء تسجيل المنتج على موقع www.samsung.com/register











ميزات الغسالة الجديدة من samsung

تتميز الغسالة الجديدة بأنها مزودة بإمكانية تغيير الطريقة التي ترغب في إجراء الغسيل بها. تتميز غسالة Samsung بوجود كافة الميزات التي خول المهام غير المرغوبة إلى شيء متع. بدءاً من سعتها ذات الحجم الفائق وحتى استهلاكها الاقتصادي للطاقة.

• الغسيل إلى التجفيف بزر واحد

تمتع بإدارة وظائف الغسيل والتجفيف الملائمة لا تتوقف. يمكن اختيار ٣ برامج فجفيف خاصة مختلفة لتنفيذ دورة الغسيل بأكملها بما في ذلك دورة التجفيف باستخدام زر واحد.

• Cup Board (خزانة) (Standard program)(البرنامج القياسي). Low temp drying (التجفيف بدرجة حرارة منخفضة). Cup Board (الكي). Time Drying (الكي). Time Drying (التجفيف هذه بشكل مستقل عن برامج التجفيف هذه بشكل مستقل عن برامج الغسيل.

• Child Lock (قفل للأطفال)

تضمن وظيفة قفل للأطفال إبقاء الأطفال بعيداً عن الغسالة.

تعمل ميزة الأمان هذه على منع الأطفال من اللعب بالغسالة بالإضافة إلى تنبيهك عند تشغيلها.

• اعتماد غسل الصوف

لقد تم اختبار الغسالة وقد تطابقت مع المواصفات التي حددتها شركة Woolmark الخاصة بغسل المنتجات الصوفية في الغسالة.

يجب غسل الأقمشة وفقاً للتعليمات الموجودة على البطاقة الموجودة على الملابس كما هو محدد من قبل شركتي Woolmark و Samsung.

• Delay End (تأجيل التوقف)

تأجيل الدورة حتى ١٩ ساعة بإمكانية زيادة ساعة وزبادة إمكانية استخدام الغسالة لاسيما عندما ترغب في الذهاب للخارج.

• برنامج Delicates (الأنسجة الرقيقة)

يكنك اتخاذ حذر إضافي عند غسيل مثل هذه الأنواع من الملابس وذلك عن طريق قديد درجة الحرارة الملائمة ودورة الغسيل الرقيق وكمية الماء المناسبة.

سنخان خزفي للقوة وتوفير الكهرباء (طرازات محددة)

يتميز السخان الخزفي المبتكر بأنه ذو قوة مضاعفة عن السخانات العادية. يوفر هذا من تكاليف الصيانة والإصلاحات. كما أنه يحفف من حدة الماء الساخن على الملابس ويوفر الكهرباء.

• Air Wash (الغسيل الهوائي)

يعمل نظام Air Wash (الغسيل الهوائي) على إزالة الروائح الكريهة وتعقيم الملابس المغسولة من الروائح التي لا يمكن التخلص منها من خلال نظام الغسيل العادي. وهي منفعة يتم الحصول عليها من آلية الغسيل الهوائي الفريدة.

- مكن غسلها بالغسيل الهوائي: السترات الصوفية, مريلات الأطفال القطنية / المنخفضة, سترات غليظة, بدلات, وسادات,
 وسائد, دمى مشتغلة بالإبرة.
 - لا ينطبق بطانيات جلدية، حريرية، مخملية، كهربائية، والملابس المبقعة الأخرى.







• Digital Graphic Display (شَاشَـة عرض رسـومية رقمية)

تتميز لوحة التحكم في Digital Graphic Display (شاشة العرض الرسومية الرقمية) بالوضوح وسهولة الاستعمال لتقليل التهيج والمضايقة. تتميز شاشة Digital Graphic Display (العرض الرسومية الرقمية) بسهولة التشغيل التي تتيح لك القيام بعمليات الضبط بسرعة ودقة على عملية الغسيل للحصول على نتائج غسيل متازة.

• باب واسع

فتحة عريضة جدًا للباب لإتاحة مشاهدة عملية الغسل بشكل مناسب! كما أنه يسمح بإضافة قطع الملابس وإزالتها بسهولة. وخصوصا القطع كبيرة الحجم مثل المفروشات والناشف إلخ.

• محرك الدفع المباشر

يتم تخفيض الاهتزازات بدرجة كبيرة لكون الحلة لا تستخدم السيور أو التروس. تضمن هذه الميزة لغسالتك هدوء أكثر ومتانة أكسر.

يحتوى هذا الدليل على معلومات هامة حول عملية التركيب والاستخدام وصيانة غسالة Samsung الجديدة. ويكنك الرجوع إليه للتعرف على شكل لوحة التحكم, والتعليمات التي تتعلق بكيفية استخدام الغسالة. والتلميحات التي تتعلق باستغلال أحدث الميزات والإمكانات المتوفرة بها. يرشدك قسم "استكشاف المشكلات وإصلاحها ورموز المعلومات" الموجود في صفحة ٣٥ إلى ما يجب عليك فعله في حالة حدوث عطل بالغسالة الجديدة.







معلومات السلامة

تهانينا لشرائك الغسالة الجديدة ™ Samsung ActivFresh. يحتوي هذا الدليل على معلومات هامة خاصة بتركيب الغسالة واستخدامها والعناية بها. الرجاء استغراق الوقت اللازم لقراءة هذا الدليل بغرض الاستفادة الكاملة من المنافع والمزايا العديدة الموجودة في الغسالة.

ما ختاج إلى معرفته بشأن تعليمات السلامة

الرجاء قراءة هذا الدليل جيداً لضمان معرفتك بمدى التشغيل الآمن والفعال للمزايا والوظائف الكثيرة في غسالتك الجديدة والاحتفاظ به في مكان آمن بالقرب من الغسالة من أجل الرجوع إليه مستقبلاً. استخدم هذا الجهاز للغرض الخصص له فقط كما هو محدد في دليل التعليمات هذا.

لا تغطي التحذيرات وتعليمات السلامة الهامة الواردة في هذا الدليل جميع الحالات والمواقف الحتملة التي قد خدث. تقع عليك مسئولية الاستعانة بحواسك العامة وتوخى الحيطة والعناية عند تركيب الغسالة الخاصة بك وصيانتها وتشغيلها.

لكون تعليمات التشغيل التالية تغطى موديلات متعددة. فقد تختلف ميزات الغسالة الخاصة بك اختلافاً بسيطاً عن ميزات الغسالات المذكورة في هذا الدليل وقد لا تنطبق جميع علامات التحذير.إذا كانت لديك أي أسئلة أو مخاوف. فاتصل بأقرب مركز خدمة أو البحث عن المساعدة أو المعلومات عبر الإنترنت الموجودة في الموقع www.samsung.com.

رموز الأمان والاحتياطات الهامة

ما المقصود من الأيقونات والعلامات الموجودة في دليل المستخدم هذا:

<u>آ</u> غنیر	مخاطر أو ممارسات غير آمنة قد تؤدي إلى حدوث إصابة شخصية جسيمة، الوفاة، و/ أو الإضرار في المتلكات.
تنبيه	مخاطر أو ممارسات غير آمنة قد تؤدي إلى حدوث إصابة شخصية جسيمة، واأو الإضرار في المتلكات.
تنبيه	لتقليل خطر نشوب حريق. أو انفجار أو صعقة كهربائية أو إصابة جسيمة عند استخدام الغسالة الخاصة بك. قم بإتباع احتياطات السلامة الأساسية هذه:
	منوع.
X	منوع الفك.
	منوع اللمس.
*	اتبع الإرشادات كما هي.
-	قم بفصل موصل الطاقة من مقبس الحائط.
=	تأكد من أن الغسالة مثبته على الأرض لمنع حدوث صدمة كهربائية.
	اتصل بمركز الخدمة للمساعدة.
Ø	ملاحظة

تهدف علامات التحذير هذه إلى منع حدوث إصابات لك وللآخرين.

لذا الرجاء إتباعها بعناية.

قم بحفظ هذا الدليل في مكان آمن بعد قراءته للاحتفاظ به كمرجع في المستقبل.

🚖 قم بقراءة كل التعليمات قبل استخدام هذا الجهاز.

وكما هو الحال مع أي جهاز يستخدم الكهرباء والأجزاء المتحركة. يوجد مخاطر محتملة. لتشغيل هذا الجهاز بأمان. تعرف على عملية التشغيل الخاصة به وتوخى الحيطة عند استخدامه.

٤_ معلومات السلامة







لا تدع الأطفال (أو الحيوانات الأليفة) تعبث على الغسالة الآلية الخاصة بك أو بداخلها. لا يتم فتح باب الغسالة بسهولة من الداخل. وقد يتعرض الأطفال للإصابة البالغة في حال انحشارهم بداخلها.



هذا الجهاز غير مخصص للاستخدام من قبل الأشخاص (بما في ذلك الأطفال) الذين يعانون من نقص في قدراتهم البدنية أو الحسية أو العقلية هذا الجهاز عير محصص تلاستحدام س حبن العسدات الله عنه المستخدام هذا الجهاز من قبل شخص مسؤول عن سلامتهم. عنبر

يجب مراقبة الأطفال لضمان عدم عبثهم بالجهاز

في حال تلف القابس (سلك إمداد الطاقة). يجب استبداله بواسطة الجهة الصانعة أو وكيل الخدمة التابعة لها أو أي شخص مؤهل كذلك

يجب وضع هذا الجهاز في مكان بحيث يتيح الوصول بسهولة إلى قابس الطاقة وألسنة قفل إمداد الماء وأنابيب التصريف.

عندما تكون الغسالة مزودة بفتحات تهوية في القاعدة. قم بالتأكد من عدم إعاقة الفتحات بسبب السجاد أو أي عوائق أخرى.

استخدم مجموعات الخراطيم الجديدة ولا يجب إعادة استخدام مجموعات الخراطيم القديمة.







معلومات السلامة

🛕 علامات تخذير هامة خاصة بالتركيب





🚖 يجب إجراء تركيب هذا الجهاز من قبل فني مؤهل أو إحدى شركات الخدمة.

عدم الالتزام في القيام بهذا قد يؤدي إلى حدوث صعقة كهربائية أو انفجار أو مشكلات في المنتج أو وقوع الإصابة.

يعد الجهاز ثقيل الوزن ويجب توخى الحذر عند رفعه

قم بتوصيل كابل الطاقة في مقبس التيار الكهربائي المتناوب بقوة ٢٠٠ فولت/ ١٠ هرتز/ ١٥ أمبير أو أعلى واستخدم المقبس لهذا الجهاز فقط. علاوة على ذلك، لا تستخدم كابل الاستطالة.

- قد يؤدى وضع قابس الجهاز مع قوابس أجهزة أخرى مشتركة في نفس مقبس الكهرباء الموجود بالحائط باستخدام موزع (مشترك) كهربائي أو تمديد كابل الطاقة إلى حدوث صعقة كهربائية أو نشوب حريق.
- تأكد من أن الفلطية الكهربائية والتردد والتيار الكهربائي غير مختلفين عن مواصفات المنتج. عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث صعقة كهربائية أو نشوب حريق. عدم توصيل قابس الطاقة في مقبس الكهرباء بالحائط بشكل ثابت.

قم بإزالة جميع المواد الغربية مثل الأتربة أو الماء من أطراف توصيل قابس الطاقة ونقاط التوصيل باستخدام قطعة ملابس جافة

- قم بفصل قابس الطاقة وتنظيفه بواسطة قطعة قماش جافة.
- عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث صعقة كهربائية أو نشوب حريق.

قم بتوصيل قابس الطاقة في مقبس الكهرباء الموجود بالحائط بالاجّاه الصحيح حتى يسير الكابل باجّاه الأرضية.

في حالة قيامك بتوصيل قابس الطاقة في المقبس بالاجّاه المعاكس. فقد تتلف الأسلاك الكهربائية في الكابل بما يؤدي لحدوث صعقة كهربائية أو نشوب حريق.

احتفظ بجميع مواد التغليف بطريقة جيدة بعيداً عن متناول يد الأطفال حيث قد تشكل هذه المواد خطراً على الأطفال.

- إذا وضع طفل حقيبة فوق رأسه، فقد يؤدى ذلك إلى تعرضه للاختناق.

في حال تلف الجهاز أو قابس الطاقة أو كابل الطاقة، اتصل بأقرب مركز خدمة لديك.



يجب تأريض هذا الجهاز بطريقة صحيحة.

لا تقم بالتأريض على أنبوب الغاز. أو أنبوب الماء البلاستيكي أو خط الهاتف.

- قد يؤدي ذلك إلى حدوث صعقة كهربائية أو نشوب حريق أو انفجار أو مشكلات مع المنتج
- لا تقم مطلقاً بتوصيل كابل الطاقة في مقبس غير مؤرض بطريقة صحيحة والتأكد من التوافق مع القوانين الحلية والقومية.



1_ معلومات السلامة

لا تقم بتركيب هذا الجهاز بالقرب من مدفأة أو أي مادة قابلة للاشتعال.

لا تقم بتركيب هذا الجهاز في موقع به رطوبة أو ملوث بالزيت أو الأتربة. أو في موقع معرض لأشعة الشمس المباشرة والماء (قطرات الماء).

لا تقم بتركيب الجهاز في موقع درجة الحرارة به منخفضة

- قد يؤدي التجمد إلى انفجار الأنابيب

لا تقم بتركيب هذا الجهاز في موقع به تسرب للغاز.

قد يؤدي هذا إلى حدوث صعقة كهربائية أو نشوب حريق.

لا تستخدم الحول الكهربائي.

- قد يؤدى هذا إلى حدوث صعقة كهربائية أو نشوب حريق.

لا تستخدم قابس الطاقة التالف أو كابل الطاقة التالف أو مقبس الكهرباء غير الثابت على الحائط.

- قد يؤدى هذا إلى حدوث صعقة كهربائية أو نشوب حريق.

لا تسحب أو ثنى كابل الطاقة بقوة.

لا تقم بثنى أو ربط كابل الطاقة.









لا تقم بتعليق كابل الطاقة فوق أحد الأشياء المعدنية. أو وضع شيء ثقيل فوق كابل الطاقة. أو إدخال كابل الطاقة بين الأشياء. أو دفع كابل الطاقة في المساحة خلف الجهاز.

- قد يؤدي هذا إلى حدوث صعقة كهربائية أو نشوب حريق.

لا تقم بسحب كابل الطاقة عند نزع قابس الطاقة.

- قم بنزع قابس الطاقة بإمساكه من القابس.
- عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث صعقة كهربائية أو نشوب حريق.

لا تضع كابل الطاقة والأنابيب أرضاً حيث قد تطرح أرضاً فوقهم.



علامات التنبيه الخاصة بالتركيب



يجب وضع هذا الجهاز بطريقة تتيح إمكانية الوصول إلى القابس بسهولة.

- عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث صعقة كهربائية أو نشوب حريق من جراء التسرب الكهربائي.

قم بتركيب جهازك على أرضية مستوية وصلبة يمكنها خمل وزن الجهاز.

عدم الالتزام بالقيام بذلك قد يؤدي إلى حدوث اهتزازات أو خَركات أو ضوضاء غير عادية أو مشكلات مع المنتج.



🗘 علامات تحذيرهامة خاصة بالاستخدام



- إذا تعرض الجهاز للغمر بالماء. فقم بقطع إمداد الماء والطاقة فوراً واتصل بأقرب مركز خدمة. - لا تلمس قابس الطاقة ويديك مبتلة
 - عدم الالتزام بالقيام بذلك قد يؤدي إلى حدوث صعقة كهربائية
- إذا كان المولد يصدر ضوضاء غير طبيعية. أو رائحة احتراق أو دخان. فقم بنزع قابس الطاقة على الفور والاتصال بأقرب مركز خدمة

- عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث صعقة كهربائية أو نشوب حريق.

في حال حدوث تسرب للغاز (كغاز البروبين. وغاز البترول المسال. وما شابه ذلك.). فقم بالتهوية فوراً دون لمس قابس الطاقة. لا تلمس الجهاز أو كابل الطاقة.

- لا تستخدم مروحة تهوية.
- فقد ينجم عن ذلك انفجار أو نشوب حريق.

لا تدع الأطفال بلعبون بداخل الغسالة أو فوقها. علاوة على ذلك، عند التخلص من الجهاز. قم بإزالة ذراع باب الغسالة.

في حالة الانحشار بالداخل، فقد يتعرض الطفل للانحشار والاختناق لحين الموت.

تأكد من إزالة التغليف (الإسفنج. ستيرفوم) المثبتة بالجزء السفلي من الغسالة قبل استخدامها.





معلومات السلامة



لا تغسل الأشياء الملوثة بالغازولين أو الكيروسين أو البنزين أو مخفف الطلاء (التنر) أو الكحول أو أي أشياء قابلة للاشتعال أو مواد متفحرة

قد يؤدى هذا إلى حدوث صعقة كهربائية أو نشوب حريق أو انفجار.

لا تقم بفتح باب الغسالة عنوة أثناء تشغيلها (الغسيل ذات درجة عالية/ جَفيف/ اللف).

قد تودى المياه المتدفقة من خارج الغسالة إلى حدوث حروق أو جعل الأرضية زلقة.

قد يؤدى ذلك إلى حدوث إصابة.

· قد يؤدي فتح الباب عنوة إلى تلف المنتج أو حدوث إصابة.

لا تدخل يديك أسفل الغسالة.

قد يؤدي ذلك إلى حدوث إصابة.

لا تلمس قابس الطاقة ويديك مبتلة.

- قد يؤدي ذلك إلى حدوث الصعقة الكهربائية.

لا تقم بإيقاف تشغيل الجهاز عن طريق نزع قابس الطاقة أثناء التشغيل.

- توصيل قابس الطاقة في مقبس الكهرباء بالحائط مرة أخرى قد يؤدي إلى حدوث شرارة وبالتالي حدوث صعقة كهربائية أو نشوب حريق.

لا تدع الأطفال أو الأشخاص العاجزين يستخدمون الغسالة دون رقابة. لا تدع الأطفال يصعدون فوق الجهاز

عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث صعقة كهربائية أو حدوث حروق أو إصابة.

لا تدخل يدك أو أي شيء معدني أسفل الغسالة أثناء تشغيلها.

قد يؤدي ذلك إلى حدوث إصابة.

لا تقم بنزع قابس الجهاز عن طريق سحبه من كابل الطاقة. وقم دوماً بإمساك القابس بإحكام واسحبه مباشرة للخارج من مصدر التيار الكهربائي.

- قد يؤدي تلف الكابل إلى حدوث قصور في الدائرة الكهربائية (ماس كهربائي). ونشوب حريق. و/أو صعقة كهربائية



لا خَاول القيام بعلمية الإصلاح أو التفكيك أو التعديل على الجهاز بنفسك.

- - · عند تتطلب الضرورة إصلاح الجهاز أو إعادة تركيبه، فقم بالاتصال بأقرب مركز خدمة لديك.
- عدم الالتزام في القيام بهذا قد يؤدي إلى حدوث صعقة كهربائية أو نشوب حريق أو مشكلات في المنتج أو وقوع الإصابة.



٨_ معلومات السلامة

في حال دخول أي أشياء غريبة كالماء إلى الجهاز، فقم بنزع قابس الطاقة والاتصال بأقرب مركز خدمة لديك.

عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث صعقة كهربائية أو نشوب حريق.

عندما يصبح خرطوم إمداد الماء غير مثبت بإحكام في الصنبور ويغمر الجهاز بالماء. فقم بنزع قابس الطاقة.

عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث صعقة كهربائية أو نشوب حريق.

قم بنزع قابس الطاقة في حال عدم استخدام الجهاز لفترات زمنية طويلة أو أثناء الرعد/ العاصفة البرقية.

عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث صعقة كهربائية أو نشوب حريق.









🛕 علامات التنبيه الخاصة بالاستخدام



في حال تلوث الغسالة بسبب المواد الغريبة كالمواد المنظفة أو الأوساخ أو بقايا الطعام. وما شابه ذلك. فقم بنزع قابس الطاقة وتنظيف الغسالة باستخدام قطعة قماش ناعمة ورطبة.

عدم الالتزام للقيام بذلك قد يؤدي إلى تغيير اللون أو التشوه أو التلف أو الصدأ.

قد ينكسر الزجاج الأمامي بسبب الاصطدام القوي. توخي الحيطة عند استخدام الغسالة.

عندما ينكسر الزجاج، قد يؤدي ذلك إلى حدوث الإصابة.

بعد حدوث قطع لإمداد الماء أو عند إعادة توصيل خرطوم إمداد الماء, قم بفتح الصنبور ببطء. قم بفتح الصنبور ببطء بعد الفترة الطويلة من عدم الاستخدام.

قد يؤدي ضغط الهواء في خرطوم إمداد الماء أو أنبوب الماء إلى حدوث تلف بأحد الأجزاء أو يؤدي إلى تسرب الماء.

في حال حدوث خطأ بالتصريف أثناء التشغيل. خقق إذا كانت توجد مشكلة في التصريف أم لا.

إذا تم استخدام الغسالة عند تعرضها للغمر بالماء بسبب مشكلة تسريب ما. فقد يؤدي ذلك إلى حدوث صعقة كهربائية أو نشوب حريق من جراء التسرب الكهربائي.

قم بإدخال الملابس في الغسالة بشكل كامل تماماً حتى لا تنحشر الملابس في الباب.

في حال تعرض الملابس للانحشار بالباب. فقد يؤدي ذلك إلى تلف الملابس أو الغسالة. أو يؤدي إلى تسرب الماء.

تأكد من قفل الصنبور في حال عدم استخدام الغسالة.

تأكد من أن البرغي الموجود في وصلة خرطوم الإمداد محكمة الربط بطريقة صحيحة.

عدم الالتزام في القيام بذلك قد يؤدي إلى الإضرار في الممتلكات أو حدوث الإصابة.

تأكد إذا كان مانع التسرب المطاطي غير ملوث بأي مواد غريبة (نفايات. خيوط. ما شابه ذلك).

إذا لم يكن الباب مغلق تماماً. فقد يؤدى ذلك إلى تسرب الماء.

افتح الصنبور وتأكد إذا كانت موصل خرطوم إمداد الماء محكم الربط جيداً وعدم وجود أي تسرب للماء قبل استخدام المنتج.

إذا كانت البراغي على موصل خرطوم إمداد الماء غير مربط بإحكام. فقد يؤدي ذلك إلى تسرب الماء.

لتقليل خطر نشوب الحريق أو الانفجار:

في ظل ظروف معينة. قد يتم إنتاج غاز الهيدروجين في نظام الماء الساخن مثل سخان ماء الاستحمام الساخن الخاص بك والذي لم يتم استخدامه لمده أسبوعين أو أكثر. غاز الهيدروجين من الغازات القابلة للانفجار. في حال عدم استخدام نظام الماء الساخن الخاص بك لمدة أسبوعين أو أكثر. فقم بفتح جميع حنفيات الماء الساخن في منزلك. ودع الماء يتدفق لعدة دقائق قبل استخدام غسالتك. سيؤدي ذلك إلى خرير تراكم غاز الهيدروجين. ونظراً لأن غاز الهيدروجين من الغازات القابلة للاشتعال. فلا تقم بالتدخين أو إشعال اللهب الكشوف خلال هذا الوقت. قم بالتهوية فوراً دون لمس قابس الطاقة في حال







معلومات السلامة



لا تقف فوق الجزء العلوي من الجهاز أو تضع الأشياء (كالملابس. الشموع المشتعلة. السجائر المشتعلة. الأطباق. المواد الكيميائية. الأشياء المعدنية وما شابه ذلك) على الجهاز.

قد يؤدي ذلك إلى حدوث صعقة كهربائية أو نشوب حريق أو مشكلات مع المنتج أو حدوث إصابة.

لا تقم برش أي مادة متطايرة كالمبيد الحشري على سطح الجهاز.

فبالإضافة إلى كون تلك المواد ضارة على البشر. فأنها قد تؤدي كذلك إلى حدوث الصعقة الكهربائية أو نشوب الخريق أو مشكلات مع المنتج.

لا تقم بوضع أي شيء يولد مجالاً كهرومغناطيسياً بالقرب من الغسالة.

قد يؤدي ذلك إلى حدوث إصابة بسبب العطل.

ولكون الماء الذي تم تصريفه أثناء دورة الغسل عالية درجة الحرارة أو دورة التجفيف ماء ساخن. فلا تلمسه.

قد يؤدي ذلك إلى حدوث حروق أو إصابات.

لا تقم بغسل أو لف أو جُفيف المقاعد المقاومة للماء أو المفارش أو الملابس (*) إلا إذا كان الجهاز الخاص بك مزوداً ببرنامج خاص لغسيل هذه الأشياء.

- لا تقم بغسل المفارش الكثيفة والصلبة حتى لو كانت بها علامة تتيح غسلها بالغسالة على ملصق العناية.
 - قد يؤدي ذلك إلى الإصابة أو تلف الغسالة أو الجدران أو الأرضية أو الملابس بسبب الاهتزازات غير العادية.
- الشراشف الصوفية وأغطية المطر وملابس الصيد وسراويل التزلج وأكياس النوم وأغطية حفاظات الأطفال وبدل التعرق وأغطية الدراجات والدراجة الآلية والسيارات وما شابه ذلك.

لا تقم بتشغيل الغسالة عند إزالة صندوق مادة التنظيف منها.

فقد يؤدى ذلك إلى حدوث صعقة كهربائية أو إصابة ناجمة عن تسرب الماء.

لا تلمس الجزء الداخلي من الأنبوب أثناء أو بعد التجفيف مباشرة لأنه يكون ساخنا.

- قد يؤدى ذلك إلى حدوث حروق.

لا تدخل يديك في صندوق المادة المنظفة بعد فتحه.

- قد يؤدي ذلك إلى تعرض يدك للإصابة حيث قد تنحشر بواسطة جهاز إدخال المنظف. لا تقم بوضع أية أشياء (كالأحذية، بقايا الطعام. الحيوانات) بخلاف الملابس في الغسالة.
 - قد يؤدي ذلك إلى تلف الغسالة أو حدوث إصابة أو موت الحيوانات بسبب الاهتزازات غير الطبيعية.

لا تقم بالضغط على الأزرار باستخدام أشياء حادة كالدبابيس والسكاكين والأظافر وما شابه ذلك.

قد يؤدى هذا إلى حدوث صعقة كهربائية أو حدوث إصابة.

لا تقم بغسل الملابس الملوثة بالزيت أو الكريمات أو سوائل اللوشيون التي توجد عادة في متاجر بيع مستحضرات العناية بالبشرة أو عيادات التدليك.

فقد يؤدي ذلك إلى تشوه مانع التسرب المطاطى وتسرب الماء.

لا تترك الأشياء المعدنية كدبابيس الأمان أو دبابيس الشعر أو مادة التبييض في الحوض لفترات زمنية طويلة.

- فقد يؤدي ذلك إلى تكون صدأ بالحوض.
- في حال بدء ظهور الصدأ على سطح الحوض. قم بوضع مادة تطهير (معتدلة) على السطح واستخدم قطعة إسفنج للتنظيف. لا تستخدم مطلقاً فرشاة معدنية.

لا تستخدم مادة تنظيف جافة مباشرة ولا تقم بغسل الملابس الملوثة أو شطفها أو لفها بواسطة مادة تنظيف جافة.

قد ينجم عن ذلك حدوث احتراق أو اشتعال تلقائي بسبب حرارة أكسدة الزيت.

لا تستخدم ماء ساخن من أجهزة التبريد/ التدفئة.

- فقد ينجم عن ذلك مشكلات بالغسالة.







لا تستخدم صابون غسيل اليدين المعتدل في الغسالة.

- في حال تصلبه وتراكمه بداخل الغسالة. فقد يؤدي ذلك إلى حدوث مشكلات مع المنتج أو حدوث تغيير اللون أو الصدأ أو

لا تقم بغسل الملابس كبيرة الحجم مثل الشراشف في شبكة الغسالة.

- قم بوضع الجوارب وحمالات الصدر في شبكة الغسالة وغسلها مع ملابس أخرى.
- عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث إصابة بسبب الاهتزازات غير العادية.

لا تستخدم مواد منظفة صلبة.

- إذا تراكم بداخل الغسالة، فقد يؤدي ذلك إلى تسرب الماء.

عندما تكون الغسالة مزودة بفتحات تهوية في القاعدة. قم بالتأكد من عدم إعاقة الفتحات بسبب السجاد أو أي عوائق أخرى.

تأكد من أن جميع جيوب الملابس المراد غسلها فارغة.

 فالأشياء الصلبة والحادة مثل العملات المعدنية أو دبابيس الأمان أو المسامير أو البراغى أو الأحجار قد تودي إلى حدوث تلف بالغ بالجهاز.

لا تقم بغسل الملابس ذات الأبازم أو الأزرار الكبيرة أو التي بها أشياء معدنية ثقيلة أخرى.



🗘 علامات تحذيرهامة خاصة بالتنظيف



لا تقم بتنظيف الجهاز بواسطة ماء مرشوش مباشرة عليها.

لا تقم بتنطيف اجهار بواست مديد و الكول لتنظيف الجهاز. الله الكول لتنظيف الجهاز. و الكول لتنظيف الجهاز.

- فقد يؤدي هذا إلى حدوث تغيير اللون أو التشوه أو التلف أو حدوث صعقة كهربائية أو نشوب حريق.

قبل تنظيف الجهاز أو إجراء الصيانة عليه، قم بنزع قابس الجهاز من مقبس الحائط.

- عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث صعقة كهربائية أو نشوب حريق.







المحتويات

التحقق من الأجزاء ۱۳ استيفاء متطلبات التركيب ١٤ مصدر الطاقة الكهربائية والتوصيل الأرضي توريد الماء تصريف الماء 1 0 سطح الأرضية ۱۵ درجة الحرارة المحيطة تركيب القنطرة أو الخزانة تركيب الغسالة

غسل الملابس

إعداد الغسالة

٢١

إرشادات أساسية استخدام لوحة التحكم ٢٢ قفل للأطفال ٢٤

الغسل للمرة الأولى

إيقاف تشغيل الصوت تأجيل التوقف

وظيفة التصريف فقط ٢۵

(الغسيل الهوائي) Air Wash ٢Δ استخدام الدورة الجافة ٢٦

نمط Auto Drying (التجفيف الأوتوماتيكي) غسل الملابس باستخدام قرص تحديد الدورة

> غسل الملابس يدوياً ۲۸

معلومات حول مسحوق الغسيل والمواد الإضافية

ما هو مسحوق الغسيل الذي يمكنك استخدامه درج مسحوق الغسيل

تصريف الماء من الغسالة عند الطوارئ

تنظيف الأسطح الخارجية ۳۱

تنظيف درج مسحوق الغسيل والجزء الداخلي منه ۳٢ تنظيف مصفاة الخلفات ٣٣

تنظيف المصفاة الشبكية المتصلة بخرطوم الماء

إصلاح جهاز غسالة متجمد ٣٤ ٤٣

تخزين الغسالة

خَقق ما يلي إذا كانت الغسالة...

رموز المعلومات

تنظيف الغسالة وصيانتها

استكشاف المشاكل وحلها ورموز العلومات

٣٧ جدول الدورة جدول الدورة

جدول العناية بالأقمشة

حماية البيئة

إعلان التوافق المواصفات

١١_ المحتويات








إعداد الغسالة

تأكد من إتباع القائم بالتركيب لهذه الإرشادات بدقة حتى تعمل الغسالة بشكل صحيح ولتجنب حدوث إصابات عند القيام بالغسل.

التحقق من الأجزاء

أخرج الغسالة بحرص من الصندوق وتأكد من وجود كافة الأجزاء الموضحة أدناه. في حالة تلف الغسالة أثناء عملية الشحن. أو عدم استلامك لكافة الأجزاء, قم بالاتصال بخدمة عملاء Samsung أو الموزع المعتمد لدى Samsung.

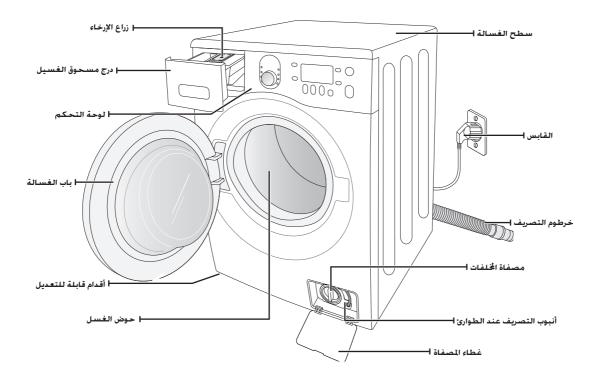











اعداد الغسالة

استيفاء متطلبات التركيب

مصدر الطاقة الكهربائية والتوصيل الأرضى

لتقليل خطر حدوث حريق أو صدمة كهربائية أو إصابة جسدية. يجب أن تتم عملية توصيل الأسلاك والتوصيل الأرضى وفقاً لأحدث نسخة من اللائحة القومية أو الوطنية للكهرباء ANSI/FNPA. رقم 70 والقوانين والضوابط الحلية. تقع على عاتق المالك مسؤولية توفير المتطلبات الكهربائية الكافية لهذا الجهاز.



منوع استخدام كبلات إضافية.

استخدم سلك التيار الكهربائي المرفق مع الغسالة فقط.

عند الإعداد لعملية التركيب، تأكد أن سلك التيار الكهربائي يوفر:

- قاطع دائرة كهربائية أو صمام كهربائي بقدره ٢٢٠ فولت ~ ٢٤٠ فولت و ٥٠ هرتز و ١٥ أمبير
 - دائرة كهربائية فرعية لتشغيل الغسالة فقط

يجب توصيل الغسالة بأخذ أرضي بشكل صحيح. وفي حالة حدوث خلل أو تعطل في الأداء. سيؤدي التوصيل الأرضي إلى تقليل خطورة حدوث صدمة كهربائية وذلك بتوفير مسار من المقاومة للتيار الكهربائي.

تكون الغسالة مزودة بسلك تيار كهربائي به ثلاثة قوابس شوكية أرضية لاستخدامها في المقبس الأرضي المركب بشكل صحيح.



🎾 لا تقم بتوصيل السلك الأرضى بخطوط المواسير المصنوعة من البلاستيك. أو خطوط الغاز. أو مواسير الماء الساخن.

فقد يؤدي التوصيل غير الصحيح للموصل الأرضى الخاص بالغسالة إلى حدوث صدمة كهربائية.

استشر الفنى المتخصص أو الموظف الختص بالخدمة إذا لم تكن متأكداً من صحة التوصيل الأرضى للغسالة. يحظر استخدام قابس آخر غير المرفق مع الغسالة. وفي حالة عدم ملاءمته مع مأخذ التيار. استعن بالفني المتخصص لتركيب مأخذ مناسب.

توريد الماء

يتم ملء الغسالة بشكل سليم عندما يكون ضغط الماء ٥٠ ~ ٨٠٠ كيلوباسكال. قد يتسبب ضغط الماء الذي يكون أقل من ٥٠ كيلوباسكال في سقوط صمام الماء مما يؤدي إلى عدم إغلاقه بشكل كامل. أو قد تستغرق الغسالة وقتًا أطول مما تسمح به عناصر التحكم لملئها. ما ينتج عنه إيقاف تشغيل الغسالة. (تم تضمين نظام خُديد وقت ملء الغسالة في عناصر التحكم والذي تم تصميمه للحد من عمليات تدفق/فيضان الماء في حالة ارتخاء الخرطوم الداخلي.)

يجب أن تكون صنابير الماء على بعد ٤ أقدام (١٢١ سم) من اللوحة الخلفية للغسالة لتسهيل وصول خراطيم صنابير الماء المرفقة إلى



🕊 تقوم معظم متاجر توريد المواسير ببيع خراطيم صنابير الماء بمختلف أطوالها التي تصل إلى ١٠ أقدام (٣٠٥ سم).

- يمكنك تقليل مخاطر تسرب الماء أو تلوثه عن طريق:
 - تيسير وصول الخراطيم إلى صنابير الماء.
- إغلاق الصنابير في حالة عدم استخدام الغسالة.
- خَفق بشكل دورى مما إذا كانت مثبتات الخرطوم تسرب الماء.



١٤ _ إعداد الغسالة

قم بفحص كافة التوصيلات الموجودة في صمام وصنابير الماء للتحقق مما إذا كان هناك أي تسريبات قبل استخدام الغسالة للمرة

WD0704RE-02829C_AR.indd 14 2010-07-22 11:42:57







تصريف الماء

توصي Samsung باستخدام ماسورة رأسية يصل ارتفاعها إلى ١٨ بوصة (٤٦ سم). يجب توجيه خرطوم التصريف باستخدام مشبك خرطوم التصريف إلى اثجاه الماسورة الرأسية. يجب أن تكون الماسورة الرأسية كبيرة بدرجة كافية لإدخال القطر الخارجي لخرطوم التصريف. يقوم المصنع بإرفاق خرطوم التصريف.

سطح الأرضية

يجب تثبيت الغسالة على سطح ثابت وصلب للحصول على أفضل أداء. قد ختاج الأسطح الخشبية إلى تقويتها لتقليل الاهتزاز و/أو الأحمال غير المتزنة. يكون السجاد وأسطح البلاط الناعمة بمثابة عوامل مساهمة في عمليات الاهتزاز واحتمالية خَرك الغسالة بشكل طفيف أثناء دورة التجفيف.

لا تقم بتركيب الغسالة على أرضية أو بنية ضعيفة.

درجة الحرارة الحيطة

لا تقم بتركيب الغسالة في مناطق قد يتجمد فيها الماء. حيث أن الغسالة ختفظ دومًا ببعض الماء في صمام الماء والمضخة وأجزاء من الخرطوم. يمكن أن يتسبب الماء المتجمد الموجود في المواسير في إلحاق ضرر بالأحزمة والمضخة والمكونات الأخرى.

تركيب القنطرة أو الخزانة

لتشغيل الغسالة بشكل آمن وسليم, يجب توفير الحد الأدنى من المساحات بالنسبة إلى ما يلي:

الجوانب - ٢٥ م


الجزء العلوي - ٢٥ مم الجزء العلوي - ٢٥ مم

في حالة تركيب الغسالة والجُفف معاً. يجب أن يكون بالجانب العلوي للقنطرة أو الخزانة فتحة هواء خالية قدرها ٤٦٥ م على الأقل. لا تتطلب الغسالة وحدها فتحة هواء بعينها.

تركيب الغسالة

الخطوة رقم ا

اختيار مكان الغسالة

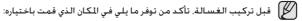

- سطح صلب ومستوي دون وجود سجاد أو بلاط قد يعوق عملية التهوية
 - مكان بعيد عن أشعة الشمس المباشرة
 - تتوفر به تهویة کافیة
- · لا يصل إلى مرحلة التجمد (أقل من ٣٢ درجة فهرنهايت أو · درجة مئوية)
 - · يكون بعيدًا عن مصادر الحرارة مثل البترول أو الغاز
 - تتوفر به مساحة كافية حتى لا يتم وضع الغسالة على سلك الطاقة



إعداد الغسالة ـــ١٥




إعداد الغسالة

الخطوة رقم آ


إزالة مسامير الشحن

قبل تركيب الغسالة الآلية. يجب عليك إزالة جميع مسامير الشحن من الجزء الخلفي بالوحدة...


قم بخلخلة جميع المسامير بواسطة مفتاح الربط المرفق مع الجهاز.

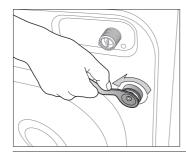

 أ. امسك الصواميل بواسطة مفتاح الربط واسحبها من خلال الجزء العريض للفتحة. كرر ذلك الإزالة كل مسمار.

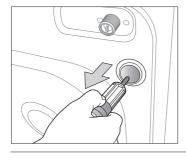

٣. قم بتغطية جميع الفتحات باستخدام الأغطية البلاستيكية المرفقة مع الجهاز.

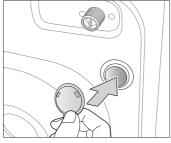

- قم بحفظ صواميل الشحن في مكان بعيد آمن حيث قد ختاج إلى نقل الغسالة إلى مكان آخر في المستقبل.
- فد تشكل مواد التعبئة خطورة على الأطفال: احتفظ بكافة مواد التعبئة (الأكياس البلاستيكية والمواد المصنوعة من مادة نسر البوليستيرين. الخ.) بعيداً عن متناول الأطفال.







الخطوة رقم ٣


ضبط استواء أرجل الغسالة



🕊 عند تركيب الغسالة. تأكد من توصيل سلك الطاقة وخرطوم توريد الماء وخرطوم التصريف بسهولة.

ضع الغسالة في المكان الحدد.

اً. اجعل الغسالة مستوية عن طريق لف الأقدام المساوية إلى الداخل والخارج يدويًا كما هو مطلوب.

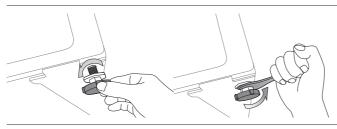

٣. عند استواء الغسالة. أحكم ربط الصماويل باستخدام مفتاح الربط المرفق مع




الخطوة رقم ٤

توصيل الماء والخرطوم

توصيل خرطوم توريد الماء

- 1. استخدم مثبت الذراع الذي على شكل حرف L الخاص بخرطوم توريد الماء البارد ووصله إلى مدخل توريد الماء البارد الموجود في الجانب الخلفي من الغسالة. وأحكم ربطه يدويًا.
- يجب توصيل أحد طرفي خرطوم توريد الماء بالغسالة وتوصيل الطرف الآخر للخرطوم بصنبور الماء. لا جُذب خرطوم توريد الماء. إذا كان الخرطوم قصيراً للغاية، استبدله بخرطوم أطول يتحمل الضغط العالى.
- صل الطرف الآخر لخرطوم توريد الماء البارد بصنبور الماء البارد وأحكم تثبيته يدويًا. يمكنك، إذا لزم الأمر. إعادة توصيل خرطوم الماء بالغسالة من خلال إرخاء مثبت الخرطوم ولفه وإعادة ربطه بإحكام.

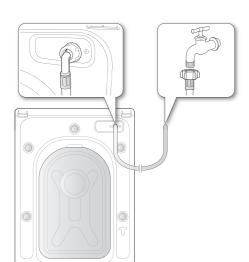

بالنسبة للطرازات الحددة المزودة بمدخل إضافي لتوريد الماء الساخن:

- استخدم مثبت الذراع الذي على شكل L الأحمر الخاص بخرطوم توريد الماء الساخن ووصله إلى مدخل توريد الماء الساخن الموجود في الجانب الخلفي من الغسالة. وأحكم ربطه يدويًا.
 - صل الطرف الآخر لخرطوم توريد الماء الساخن بصنبور الماء الساخن وأحكم تثبيته يدويًّا.
 - ٣. استخدم قطعة على شكل حرف Y إذا أردت استخدام الماء البارد فقط.

إعداد الغسالة ـــ٧١







إعداد الغسالة

توصيل خرطوم توريد الماء (طرازات معينة)


إزالة الحول من خرطوم تزويد الماء.

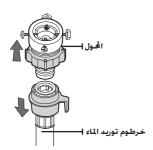


 أولاً, باستخدام مفك براغي من نوع "+". قم بخلخلة المسامير الأربعة الموجودة بالحول. ثم أخرج الحول واجعل الجزء (١) بالجاه السهم حتى تتواجد مسافة مقدارها ٥ م بينهما.

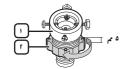


صل الحول بصنبور الماء عن طريق ربط البراغي بإحكام أثناء رفع الحول لأعلى.
 واجعل الجزء (١) بالجاه السهم وصل الطرف (١) بالطرف (١).

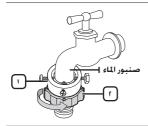

- صل خرطوم توريد الماء بالحول. عند إرخاء الجزء (٣). يتصل الخرطوم بالحول تلقائياً محدثاً صوت.
 - بعد توصيل خرطوم توريد الماء بالحول. تأكد من توصيله بشكل صحيح عن طريق سحب خرطوم توريد الماء لأسفل.

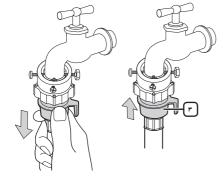


۵. صل الطرف الآخر من خرطوم توريد الماء بصمام دخول الماء الموجود بالجانب الخلفي من السلطة.
 الغسالة. لف خرطوم توريد الماء في الجاه عقارب الساعة.

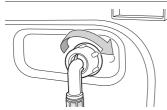



 قم بتشغيل مصدر توريد الماء وتأكد من عدم وجود تسريبات من صمام الماء أو الصنبور أو الحول. قم بتكرار الخطوات السابقة. في حالة تسريب الماء.



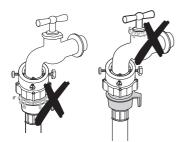

إذا كان صنبور الماء من نوع برغي. صل خرطوم توريد الماء إلى الصنبور كما هو مبين.





إعداد الغسالة ــــ١٩






إعداد الغسالة


توصيل خرطوم التصريف

يمكنك وضع نهاية خرطوم التصريف بثلاث طرق:

فوق حافة حوض الغسل: يجب وضع خرطوم التصريف على ارتفاع يتراوح بين ٦٠ و٩٠ سم. للإيقاء على انثناء خرطوم التصريف.
 استخدم ماسك الخرطوم البلاستيكي للرفق. ثبت الماسك على الجدار بواسطة خطاف أو ثبته في الصنبور بواسطة سلك أو حبل لنع سقوط خرطوم التصريف على الأرض.

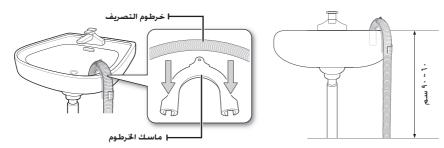

- في فرع أنبوب تصريف الحوض: يجب أن يكون فرع أنبوب التصريف فوق سباكة الحوض بحيث يكون طرف الخرطوم على ارتفاع ١٠ سـم على الأقل عن الأرض.
- ٣. في أنبوب تصريف: توصي Samsung باستخدام أنبوب عمودي على ارتفاع ٦٥ سم: على ألا يقل طوله عن ٦٠ سم ولا يزيد عن ٩٠ سم.

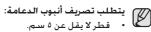


- سعة من التحميل-البعد مقدار ١٠ لتر لكل دقيقة.
- nom 4 · 1 ·

الخطوة رقم ٥

تشغيل الغسالة

قم بتوصيل سلك التيار الكهربائي بحيث يكون منفذ تيار كهربائي معتمد وبقدرة ٢٣٠ فولت ٥٠ هرتز محمي بصمام كهربائي ١٥ أمبير أو قاطع دائرة كهربائية ماثل له. (لمزيد من المعلومات حول متطلبات التوصيل الكهربائي والتوصيل الأرضي. راجع صفحة رقم ١٤٤.)

٠] _ إعداد الغسالة

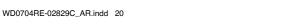





غسل الملابس

مع الغسالة الجديدة من Samsung, يقوم الجزء الأكثر صلابة بتحديد الكمية التي يجب غسلها أولاً.

الغسل للمرة الأولى



قبل غسل الملابس للمرة الأولى. يجب تشغيل الجهاز دورة كاملة (أي بدون ملابس).

- اضغط على زر Power (الطاقة).
- اً. أضف كمية قليلة من مسحوق الغسيل في الجزء الخصص له الله عن درج مسحوق الغسيل.
 - ٣. قم بتوريد الماء إلى الغسالة.
 - اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت).
- يؤدي ذلك إلى إزالة الماء المتبقي في الغسالة نتيجة التشغيل الاختباري الذي قامت به الشركة الصنعة للجهاز.





حجيرة (أ): مسحوق الغسيل لدورة الغسل الرئيسية ومواد تنقيه الماء ومواد ما قبل النقع ومادة التبييض ومواد إزالة البقع.

حجيرة (الله الإضافية. مثل مكون أو منعم الأقمشة (لا تتجاوز الحافة السلفية (الحد الأقصى) لـ "A")

إرشادات أساسية

قم بوضع الملابس في الغسالة.



• تأكد أن الملابس غير عالقة بالباب, حيث قد يؤدي ذلك إلى تسرب الماء.


- قد يتبقي مسحوق الغسيل في الجزء المطاطي الأمامي للغسالة بعد دورة الغسل. قم بإزالة أي مسحوق متبقى، لأن ذلك قد
 - لا تقم بغسل العناصر العازلة للماء.
 - أغلق الباب حتى يثبت.
 - قم بتشغيل الغسالة.
 - قم بإضافة المسحوق والمواد الإضافية إلى درج التوزيع.
 - حدد الدورة والخيارات المناسبة لكمية الملابس التي تم إضافتها. سيضيء مؤشر الغسل وسيظهر وقت الدورة الحدد على الشاشة.
 - 1. اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت).







استخدام لوحة التحكم

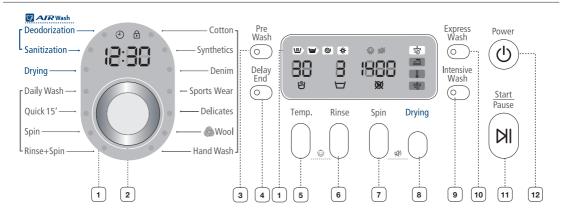

تعرض الوقت المتبقى لدورة الغسل وكافة المعلومات الخاصة بالدورة ورسائل الخطأ.

لوحة العرض الرسومية الرقمية

اختيار نوع التدوير وسرعة التجفيف للدورة.

الكلابس باستخدام قرص اختيار الدورة". (صفحة ٢٧).

Cotton (قطن) - للملابس القطنية وأغطية السرير والمفارش الكتانية. والملابس الداخلية والمناشف والقمصان متوسطة أو خفيفة الاتساخ ، الخ.

Synthetics (اصطناعي) - البلوزات والقمصان متوسطة أو خفيفة الاتساخ وغيرها من الملابس المصنوعة من البوليستر (الديولين والتريفيرا) ومادة البوليامايد (البيرلون والنيلون) أو الأنسجة الصناعية الأخرى.

Denim (الجينز) - يضمن وجود مستوى ماء أعلى في دورة الغسيل الأساسية والشطف الإضافي عدم وجود أي بقايا من مسحوق الغسيل في ملابسك.

Sports Wear (ملابس رياضية) - الملابس المقاومة للماء أو ذات الطبقة العازلة للمحافظة على نظافة

Delicates (أنسجة رقيقة) - الأقمشة الخفيفة وحمالات الصدر والملابس النسائية والفساتين والقمصان والبلوزات. للحصول على أفضل النتائج. استخدم مسحوقًا سائلاً.

Wool (صوف) - تستخدم هذه الدورة لغسل الملابس الصوفية التي يسمح بوضعها في الغسالة فقط. يجب أن تقل الحمولة عن ١,٠ كجم.

- تعمل دورة الملابس الصوفية على غسيل الملابس باستخدام الجاهات اهتزازية معتدلة. أثناء الغسل، تستمر عمليات الاهتزاز والنقع لحماية الأقمشة الصوفية من الانكماش / التشوه من أجل الحصول على نظافة رائعة لا مثيل لها. لا يعد توقف التشغيل مشكلة.
- يوصى باستخدام مواد منظفة معتدلة لدورة غسل الملابس الصوفية من أجل الحصول على نتائج غسيل محسنة وعناية أفضل بالأقمشة الصوفية.



تم اعتماد دورة غسل الملابس الصوفية في هذه الغسالة من قبل Woolmark لغسيل منتجات Woolmark التي يمكن وضعها في الغسالة شريطة أن يتم غسل المنتجات وفقاً للتعليمات الموجودة على الملصق الموجود على الملابس والتعليمات الصادرة من الشركة المصنعة لهذه الغسالة. M1010 (رقم الشهادة الصادرة عن

Handwash (غسيل يدوي) - دورة غسيل بسيطة كما لو كنت تغسل الملابس باليدين. AIR Wash (الغسيل الهوائي) - هذا البرنامج مفيداً لإزالة الروائح السيئة. تبديل AIR Wash

(Deodorization (إزالة الروائح الكريهة) → Sanitization (التعقيم))

(قرص حديد الدورة) بين أنماط التشغيل التالية:

شركة IWS NOM INEE الحدودة)

- Deodorization (إزالة الروائح الكريهة) تقليل نسبة الروائح السيئة من الملابس
- Sanitization (التعقيم) العمل على إزالة الروائح الكريهة من الملابس وتطهيرها بواسطة إجراء الغسيل الهوائي مع درجة حرارة أعلى.

Drying (التجفيف) - حدده لتجفيف الملابس أوتوماتيكياً بالكشف عن مقدار ووزن الملابس المغسولة.

ء ورص تحديد الدورة

٢١ _ غسل الملابس







	والقمصان. يبدأ برنامج قصير للاختب 'Quick 15 (سريع'15) - للملابس خا (Spin (جَفيف) - إجراء دورة جَفيف إد	فيفة الاتساخ التي ختاجها بسرعة. ضافية لإزالة المزيد من الماء. لملابس التي ختاج إلى الشطف فقط أو لإضافة منعم الأقمشة
ر خدید PREWASH (غسل أولي)	اضغط هذا الزر لتحديد الغسيل الأو	ولي.
زر تحديد DELAY END (تأجيل التوقف)	اضغط على هذا الزربشكل متكرر لـ المتوفرة (من ۳ ساعات إلى ۱۹ ساعة تشير الساعة المعروضة إلى وقت انت	_
زر تحدید TEMPERATURE (درجة الحرارة)	اضغط على هذا الزر بشكل متكرر لـ (ماء بارد كُ و ۴۰ مئوية و ٤٠ مئوية و	للاختيار من بين خيارات درجة حرارة الماء المتوفرة: ١٠ ، مئوية و ٩٥ مئوية).
ر څدید RINSE (شطف)	اضغط على هذا الزر لإضافة دورات ش	تُنطف إضافية. الحد الأقصى لعدد دورات الشطف هو خمسة.
ر څديد SPIN (جَفيف)	WD0704/WD0654/WD0604 WD0702/WD0652/WD0602 No spin" (بدون قِفيف) ∰" - تبقر النهائي. Rinse Hold"	للاختيار من بين سرعات دورة التجفيف المتوفرة. ر المراب ال
زر قحدید A (التجفیف)	Time Dry (التجفيف الوقتي) % (Cup Board (3:00min.) ← (3:00min.) (3:00min.) (3:00min.) (الخزانة) ﴿ "" - استخده القطنية والمكانية والكتانية والكتانية والكتانية والكتانية عدد حرارة مخفضة. عند حرارة مجفيف منخفضة. الالكي) ﴿ "- إنهاء دورة التجفيف الوقتي) ﴿ " " " يجب عليك تفادي غسل درجات الحرارة المنخفضة. درجات الحرارة المنخفضة. درجات الحرارة المنخفضة. خيارات الحرارة المنخفضة. (التجفيف الوقتي) تعمل (التجفيف الوقتي) تعمل الدقيق والقيام بتجفيفه	Low (درجة حرارة منخفضة) أن → Iron (الكي) △ → 2:30min. ← 2:30min. ← 1:30min. ← 1:00min. ← 2:30min. ← 2:30min. ← 2:30min. ← 1:30min. ← 1:00min. ← 30min م هذه الدورة لتجفيف حمولات الملابس الجافة مثل الملابس أ. أن أن "- تقوم هذه الدورة بحماية الأشياء الحساسة ضد السخونة فيف في حالة رطبة ملائمة للكي. أن أن الملابس المغسولة لمدة زمنية محدودة. الملابس التي قد لا يتم تجفيفها لأنه قد يتشوه شكلها حتى عند التسفيف كالكسف عن وزن الملابس المغسولة لعرض وقت التجفيف على الكشف عن وزن الملابس المغسولة لعرض وقت التجفيف على الكشف عن وزن الملابس المغسولة لعرض وقت التجفيف
زر تحدید INTENSIVE (غسیل مکثف)	اضغط على هذا الزر مع الملابس المتد لكل الدورات	سخة بشدة والتي خُتاج إلى الغسيل بكثافة. يتم زيادة مدة الدورة
زر خديد EXPRESS WASH (الغسيل السريع)	السريع) فقط مع برنامج الملابس الق اضغط على هذا الزر بشكل متكرر ل	للتبديل بين خيارات وقت الغسيل (١٥، ٢٠، ٣٠، ٤٠، ٥٠، ١٠ دقيقة). ــ Express Wash (الغسيل السريع) قد يتأخر لمدة ١٠ دقائق في



غسل الملابس

زر تحديد START/PAUSE (رخديد) الشغيل/إيقاف)	اضغط لايِقاف الدورة مؤقتاً وإعادة تشغيلها.
ر Power (الطاقة)	اضغط على هذا الزر مرة لتشغيل الغسالة. واضغط عليه مرة أخرى لإيقاف تشغيلها. في حالة عدم الضغط على أي من أزرار الغسالة لمدة تزيد عن ١٠ دقائق أثناء تشغيلها. يتم إيقاف تشغيلها تلقائيًّا.

قفل للأطفال


تَمِّنك وظيفة Child Lock (قفل للأطفال) من قفل الأزرار حتى لا يكون هناك إمكانية لتغيير دورة الغسل التي قمت باختيارها.

التشغيل/عدم التشغيل

إذا كنت ترغب في تشغيل وظيفة "تأمين ضد الأطفال" أو عدم تشغيلها. اضغط على الزين .Temp (درجة الحرارة) و Rinse (شطف) في وقت واحد لمدة " ثوان. ستضىء علامة "Child Lock" (قفل للأطفال) "" عند تشغيل هذه الميزة.



يمكن استخدام زر Power (الطاقة) فقط عند تشغيل وظيفة Child Lock (قفل للأطفال). يستمر تشغيل وظيفة Child Lock (قفل للأطفال) حتى بعد تشغيل الغسالة وإيقاف تشغيلها أو بعد فصل توصيل سلك التيار الكهربائي وإعادة توصيله.

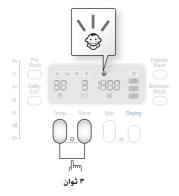

إيقاف تشغيل الصوت

يمكن خديد وظيفة Sound Off (إيقاف تشغيل الصوت) مع كافة الدورات. عند خديد هذه الوظيفة, يتم إيقاف تشغيل الصوت لكافة الدورات. حتى في حالة تشغيل الطاقة أو إيقاف تشغيلها بشكل متكرر, لا يتغير الإعداد الذي تم اختياره.

التشغيل/عدم التشغيل

إذا كنت ترغب في تشغيل وظيفة 'إيقاف تشغيل الصوت' أو عدم تشغيلها. اضغط على الزرين Spin (جُفيف) و Drying (التجفيف) في وقت واحد لمدة '' ثوان. سنتم إضاءة علامة 'Sound Off' (إيقاف تشغيل الصوت) (الك' عندما يتم تشغيل هذه الميزة.



۲ ثوان

تأجيل التوقف

يمكنك ضبط الغسالة لإنهاء عملية الغسل تلقائياً في وقت لاحق باختيار تأجيل وقت الإنهاء بين ٣ و ١٩ ساعة (بواقع زيادة ساعة واحدة). تشير الساعة المعروضة إلى الوقت الذي يتم الانتهاء فيه من عملية الغسل.

- مكنك ضبط الغسالة تلقائياً أو يدوياً حسب نوع الملابس التي تريد غسلها.
- اضغط على الزر Delay End (تأجيل التوقف) بشكل متكرر حتى تصل إلى وقت التأجيل المطلوب.
- "قنعظ على الزر Start/Pause (تشغيل/إيقاف مؤقت). سيضيء مؤشر "Delay End" (تأجيل التوقف) (ث" وتبدأ الساعة بالعد التنازلي حتى تصل إلى الوقت الحدد.
 - لإلغاء وظيفة Delay End (تأجيل التوقف), اضغط على زر Power (الطاقة) ثم تشغيل الغسالة مرة أخرى.

٢٤ _ غسل الملابس





وظيفة التصريف فقط

عندما ترغب في تجفيف الماء فقط من الغسالة الآلية، فقم باتباع التعليمات التالية.

- الطاقة).
- قم بتدوير محدد الدورة إلى الوضع "Spin" (جَفيف) "
- اضغط على زر Spin (جمهیف) مرة واحدة حتى تختفى إشارة الدورات فى الدقيقة الواحدة.
 - ثم، يظهر "١" في شاشة عرض الوقت بالمركز.
 - اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت).

(الغسيل الهوائي) Air Wash

يمكن لـAir Wash (الغسيل الهوائي) تنشيط الملابس المغسولة دون استخدام للماء اللازم لنظام استخدام الهواء الفعال. يمكن إعادة تنشيط الملابس بما في ذلك السترات الصوفية، الملابس القطنية، مريلات الأطفال. السترات الغليظة، والبدلات. (شيئان أو أقل (أقل من ١ كغم)

- افتح الباب، قم بوضع الملابس في الغسالة الآلية واغلق الباب.
 - الطاقة).
- أ. حدد Air Wash (الغسيل الهوائي) بإدارة Cycle Selector (قرص تحديد الدورة).
- في كل مرة يتم خلالها بالضغط على الزر. يقوم نمط التشغيل بالتبديل خلال التسلسل التالي: إزالة الروائح الكريهة. التعقيم

وقت الدورة	النمط
١٩ دقيقة	Deodorization (إزالة الروائح الكريهة)
٥٩ دقيقة	Sanitization (التعقيم)

- عندما يتم تحديد أحد هذه الخيارات. فلن يمكن تحديد أي زر آخر وسيمكنك فقط تحديد الفاصل الزمني الذي يتراوح ما بين 3:00 19:00.
 - قم بغلق الباب واضغط على زر Start/Pause (تشغيل/إيقاف مؤقت).
 - عندما يوجد ماء في الحوض. لن يمكن تحديد Air Wash (الغسيل الهوائي). قم بتصريف الماء وحدد Air Wash (الغسيل الهوائي).
 - اضغط على زر Start/Pause (تشغيل/إيقاف مؤقت) أو زر Power (الطاقة) لإزالة الملابس المغسولة.
- يمكن استخدام الأوراق المعطرة أو المعطرة بواسطة برامج Air Wash (الغسيل الهوائي) لإضافة العطر إلى ملابسك المنعشة (ورقة واحدة لكل شيء أو شيئين).
 - . Air Wash (الغسيل الهوائي) للملابس التالية:
 - الملابس الحساسة المصنوعة من الجلد. فرو المنك. الفرو. الحرير وما شابه ذلك.
 - قد تفقد الملابس الداخلية المطرزة بالشرائط. ووسائد مكسوة بزينة "باستخدام الغراء" وبدلات رسمية الزينة التي بها.
 - الملابس المزينة بأزرار قد تتعرض للتلف.
 - الملابس المقوية قد يتشوه شكلها.
 - الشراشف القاسية كالوسادات الخشبية (دعامة العنق)
 - الوسادات أو البطانيات الممتلئة بالبلاستيك أو النشا بدلاً من القطن
 - البطانيات الكهربائية
 - بطانيات مصنوعة من الفراء
 - البطانيات الضخمة
 - وسادات مطاطبة







غسل الملابس

استخدام الدورة الجافة

الرجاء الرجوع إلى ملصق سعة التجفيف والتأكد من وضع الملابس على مستوى أدنى من الخط الميز من أجل الملابس الجففة التي تزن ٣.٥ كغم (أو ٣٠٠ كغم (الموديلات الحددة)).

- قم بفتح الباب، ضع الملابس بداخل الغسالة وقم بغلق الباب مرة أخرى
- 1. قم بالضغط على زر Power (الطاقة)، ثم اضغط على زر Drying (التجفيف).

: سيتم خديد البرنامج القياسي أوتوماتيكياً.

يتم تحديد التجفيف فقط في البرامج مثل Cotton (قطن). Synthetics (اصطناعي). Denim (الجينز). Sports Wear (ملابس رياضية) , Daily Wash (الغسيل اليومي) ، 'Quick 15' (صريع '35) ، Spin (جُفيف) ، Rinse + Spin (شطف + جُفيف). (قم بوضع مقدار ملائم من المادة المنظفة ومنعم الأنسجة في درج المادة المنظفة وقم بغلقه مرة أخرى.)

٣. حدد زر Drying (التجفيف) كالتالي.

برامج Drying (التجفيف)

ستؤدي كل ضغطة على هذا الزربشكل متكرر إلى غديد نوع التجفيف في الترتيب التالي:
 ← (خزانة) औ Low Temp. ← औ (الكي) Cup Board (الكي) Time Dry
 ← 2:30min. ← 2:00min. ← 1:30min. ← 1:00min. ← 30min.)
 ← 2:30min. ← 2:00min. ← (3:00min.)

			(), oup -ou.u	(0.00
الوقت (أقصى حمل)	أقصى حمل	العلومات		نوع التجفيف
۱۱۰ دقیقة	۳,۵ کغم	قياسي: جُفيف اللابس المغسولة.	(خزانة) Cup Board (خزانة)	Auto Drying (التجفيف
۲۱۰ دقیقة	۰٫۱ کغم	جَفيف الملابس عند درجة حرارة منخفضة لحماية أنسجة الملابس.	Low Temp. (درجة حرارة منخفضة)(ۚ ۗ ا ۖ)	الأوتوماتيكـي)
۱٤٠ دقيقة	۰٫۱ کغم	لترك الأشياء مبللة بشكل جزئي وبالتالي تسهل عملية كيها.	Iron (الكي)(<u>=</u>)	
۱۸۰ دقیقة	۳,۵ کغم	يمكنك خديد وقت التجفيف الملائم بحسب قوام الملابس والكمية والرطوبة.	جفيف الوقتي) (📆)	الت) Time Drying

- · يتم عرض Drying Time (وقت التجفيف) أوتوماتيكياً باستشعار وزن الملابس قبل التجفيف لزيادة تأثير التجفيف.
- للملابس التي تقل عن 7.4 كغم, استخدم Auto Dry (التجفيف الأوتوماتيكي). للملابس التي تزن أكثر من ذلك, الرجاء استخدام Time Dry (التجفيف الوقتى).
 - في حال قديد دورات العصر والتجفيف, سيتم قديد سرعة العصر أوتوماتيكياً لزيادة فعالية التجفيف.
 - عند استخدام دورة التجفيف, خقق إذا كان صمام إمداد الماء مفتوحا.
 - اضغط على الزِر Start/Pause (تشغيل/إيقاف مؤقت).

: يتم تنفيذها أوتوماتيكياً كوظيفة هامة من الغسيل إلى التجفيف.

- يتم تعديل البرنامج الحدد بعد بداية التجفيف.
- إذا قمت بتحديد وظيفة Drying (التجفيف), فسيتم إعداد وظيفة SPIN (جَفيف) على الوضع High (عالي) بشكل افتراضي لزيادة تأثير التجفيف.
 - فى حال عدم تزويد ماء بارد. فلن يتم تنفيذ التجفيف
- إذا كنت لم تقم بإخراج اللابس من الحوض بعد نهاية التجفيف, فسيتم تشغيل وظيفة الحماية من التجعيد لمدة ٣٠ دقيقة مع عرض [End] (نهاية)]. لإخراج اللابس: اضغط أولاً على زر Start/Pause (تشغيل/إيقاف مؤقت) أو Power (الطاقة)
 هاخاحها.
 - إذا كنت ترغب في التجفيف بعد الغسيل اليدوي. فحدد كلا من العصر والتجفيف في وقت واحد.







نمط Auto Drying (التجفيف الأوتوماتيكي)

التقنية الجديدة التي غمل علامة سامسوغ وهي تقنية Auto Dry (التجفيف الأوتوماتيكي) يمكنها غسين حالة ملابسك الجففة وخدد بشكل أوتوماتيكي وقت التوقف وتجعل حياتك أكثر سهولة.



تستخدم مزايا Cup Board (خزانة) 🕏 ، Low Temp (درجة حرارة منخفضة) 🌡 ، وIron (الكي) 🚄 جميعاً تقنية (التجفيف الأوتوماتيكي), وسوف تتوقف أوتوماتيكياً عن التجفيف.

- Just in Time (في الوقت الحُدد لها): وفي الوقت الملائم للغاية عندما تصبح الملابس الخاصة بك جافة. تدرك الغسالة ذلك وتتوقف عن التجفيف وتمنع إتلاف ملابسك بسبب التجفيف الزائد. سيتم ضبط وقت التجفيف طبقا لذلك أثناء الدورة.
- فعلى سبيل المثال. تدرك الغسالة أن تجفيف الملابس يستغرق ٥٠ دقيقة بعد بدء دورة Cup Board (خزانة). وسوف يتوقف التجفيف مباشرة ويتم بدء دورة التبريد مع عرض ١٠ دقائق بدلا من ١١٠ دقيقة. بعد التبريد. تعرض الشاشة End (نهاية) وتنتهى الدورة بالكامل.

غسل الملابس باستخدام قرص عجديد الدورة

تتيح الغسالة الجديدة غسل الملابس بسهولة. باستخدام نظام التحكم الذكى الأوتوماتيكي من Samsung. عند اختيار أحد برامج الغسل, تقوم الغسالة بضبط درجة الحرارة ووقت الغسل وسرعات الغسل المناسبة.

- افتح صنبور الماء.
- اضغط على زر Power (الطاقة).
 - ٣. افتح الباب.
- ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
- أضف مسحوق الغسيل ومنعم القماش ومسحوق الغسل الأولي (إذا لزم الأمر) في الحجيرات الخاصة به.



- تتاح خاصية Pre-wash (غسيل أولى) عند تحديد الدورات: Cotton (قطن) و Synthetics (اصطناعي) و Sports Wear (ملابس رياضية) و Daily Wash (الغسيل اليومي). وبعد الغسل الأولي ضرورياً فقط في حالة الاتساخ الشديد
- استخدم قرص تحديد الدورة لتحديد الدورة المناسبة وفقاً لنوع المادة: Cotton (قطن) و Synthetics (اصطناعي) و Denim (جينز) و Sports Wear (ملابس رياضية) و Delicates (أنسجة رقيقة) و Wool (صوف) و Hand Wash (غسيل يدوي) و Daily Wash (الغسيل اليومي) و '91 Quick (سريع'15) و Spin (جُفيف) و Rinse + Spin (شطف + جُفيف). ستضاء المؤشرات المرتبطة على لوحة التحكم.
- في هذا الوقت. يمكنك التحكم في درجة حرارة عملية الغسل وحجم الشطف وسرعة التجفيف ووقت التأجيل بالضغط على زر الخيار المناسب.
 - اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) وعندها تبدأ الغسالة في العمل. يضيء مؤشر العملية ويظهر الوقت المتبقى للدورة على الشاشة.

خيار الإيقاف

من الممكن إضافة/إزالة قطع الملابس في غضون ٥ دقائق من بدء الغسيل.

- 1. اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) لإلغاء قفل الباب.
- 🎉 🏿 لا يمكن فتح الباب عندما تكون درجة حرارة الماء عالية جداً أو مستوى الماء عالي جداً.
 - اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) لإعادة تشغيل الغسالة.

عند انتهاء الدورة:

بعد انتهاء دورة الغسل بالكامل، يتم إيقاف الغسالة تلقائيًا.

- افتح الباب.
- أخرج اللابس.

غسل الملابس ـــ٧٧



غسل الملابس

غسل الملابس يدوياً

يمكنك غسل الملابس يدوياً دون استخدام قرص تحديد الدورة.

- قم بتشغیل مصدر تورید الماء.
- اضغط على زر Power (الطاقة) الموجود في الغسالة.
 - افتح الباب.
- ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
 - أغلق الباب.
- أضف مسحوق الغسيل. وإذا لزم الأمر. أضف منعم الأقمشة أو مسحوق الغسل الأولي في الحجيرات المناسبة.
- اضغط على الزر. Temp (**درجة الحرارة)** لتحديد درجة الحرارة المطلوبة. (ماء بارد و ٣٠ مئوية و ٤٠ مئوية و ٠ أ مئوية و ٥ أ مئوية)
 - اضغط على الزر Rinse (شطف) لتحديد العدد المطلوب لدورات الشطف.
 - الحد الأقصى لعدد دورات الشطف هو خمسة.
 - يتم زيادة مدة الغسيل وفقاً لعدد الدورات.
 - اضغط على الزر Spin (جَفيف) لتحديد سرعة التجفيف.
 - تسمح لك وظيفة إيقاف الشطف بإخراج الملابس التي لا تزال مبتلة من الغسالة. (انتظار الشطف)) No Spin : 🏒), السطف)) No Spin : 🔘
- ١٠. اضغط على الزر Delay End (تأجيل التوقف) بشكل متكرر للتبديل بين خيارات Delay End (تأجيل التوقف) المتوفرة (بين ٣ و ١٩ ساعة بإمكانية زيادة ساعة). تشير الساعة المعروضة إلى الوقت الذي يتم الانتهاء فيه من عملية الغسل.
 - انعظ على الزر Start/Pause (تشغيل/إيقاف مؤقت) وعندها تبدأ الغسالة بالدوران.

دليل غسل الملابس

اتبع هذه التعليمات البسيطة للحصول على ملابس أكثر نظافة وأكثر فاعلية.



🎉 قم بفحص بطاقة العناية الموجودة على الملابس دوماً قبل الغسل.

افرز الملابس واغسلها وفقاً للمعايير التالية:

- بطاقة العناية: افرز الملابس إلى أقطان وألياف مخلوطة وأقمشة صناعية وملابس حريرية وأصواف ورايون.
 - اللون: فم بفصل الملابس البيضاء عن الملابس الملونة. اغسل الملابس الجديدة الملونة كل على حدة.
 - الحجم: يعمل وضع الملابس مختلف أحجامها في مرة واحدة على خسين عملية الغسل.
- رقة الملمس: اغسل الملابس الرقيقة كل على حدة. باستخدام الدورة Delicate (أنسجة رقيقة) للحصول على ملابس صوفية وستائر وملابس حريرية نقية تبدو جديدة. افحص العلامات الموجودة بالملابس التي تريد غسلها أو راجع جدول العناية بالأقمشة في الملحق.

إفراغ الجيوب

قم بإفراغ كافة جيوب الملابس قبل كل عملية غسل. حيث بكن أن تتسبب الأشياء الصغيرة والصلبة ذات الأشكال غير المنتظمة مثل العملات المعدنية والشفرات والدبابيس وماسكات الورق في تلف الغسالة. لا تقم بغسل الملابس المزودة بإبزءات أو أزرار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن.

قد تتسبب المعادن المستخدمة في الملابس في تلفها وتلف الحوض. اقلب الملابس المزينة بالأزرار والمطرزة على ظهرها قبل غسلها. إذا تركت إبزمات السراويل والجواكت مفتوحة أثناء الغسل. فإن هذا قد يتسبب في تلف سلة التجفيف. يجب غلق الإبزمات وتثبيتها بخيط قبل الغسل.

قد تتشابك الملابس ذات الخيوط الطويلة مع ملابس أخرى وقد يؤدي ذلك إلى تلف هذه الملابس. احرص على تثبيت الخيوط قبل بدء الغسل.

الغسل الأولى للملابس القطنية

تقدم لك الغسالة الجديدة باستخدام مساحيق الغسيل الحديثة. أفضل نتائج لعمليات الغسل. ومن ثم فهي تساعدك على توفير الطاقة الكهربائية والوقت والماء والمسحوق. لكن إذا كانت الملابس القطنية شديدة الاتساخ. استخدم الغسل الأولى مع مسحوق الغسيل الذي يحتوي على البروتين.







غديد سعة وزن الملابس

لا تتجاوز الوزن المحدد للغسالة حيث يؤدي ذلك إلى الحصول على نتائج غير مرضية. استخدم الجدول التالي لتحديد سعة الوزن لنوع الملابس التي تقوم بغسلها.

	نوع القماش		
WD0604/WD0602	WD0654/WD0652	WD0704/WD0702	الطراز
۱٫۰ کجم	١,٥ كجم	۷٫۰ کجم	Cotton (قطن) - متوسط/خفيف الاتساخ - شديدة الاتساخ
۳,۰ کجم	۳٫۰ کجم	۳٫۰ کجم	Synthetics (اصطناعي)
۲٫۵ کجم	۲٫۵ کجم	۲٫۵ کجم	Sports Wear (ملابس رياضية)
1,۵ کجم	۲٫۵ کجم	۲٫۵ کجم	Delicates (أنسجة رقيقة)
۱٫۰ کجم	۲٫۰ کجم	۱٫۰ کجم	Wool (صوف)



- في حالة عدم توازن الملابس ("UE" يضاء المصباح على الشاشة), وفي هذه الحالة. أعد توزيع الملابس. حيث يؤدي عدم توازن الملابس إلى تقليل فعالية دورة التجفيف.
 - عند غسل المفارش أو الألحفة. قد تطول مدة الغسل أو تقل فعالية عملية التجفيف.



الله عنه المناه الماء الماء (التي يمكن غسلها في الماء) في شبكة غسل (يتم شراؤها بشكل منفصل).



- قد تنكسر الأجزاء المعدنية الموجودة في حمالات الصدر ما قد يؤدي إلى تلف الغسل. لذا يجب عليك أن تتأكد من وضعهم داخل شبكة غسل جيدة.
- قد تتعلق الملابس الصغيرة والخفيفة بالباب مثل الجوارب والقفازات والمنسوجات والمناديل. لذا قم



بوضعهم داخل شبكة غسل جيدة.



لا تقم بغسل شبكة الغسل وحدها دون وجود ملابس بها. فقد يؤدي ذلك إلى حدوث اهتزازات \\ _____ غير طبيعية في الغسالة بما قد يتسبب في حدوث إصابات.





غسل الملابس

معلومات حول مسحوق الغسيل والمواد الإضافية

ما هو مسحوق الغسيل الذي يمكنك استخدامه

يعتمد نوع مسحوق الغسيل الذي تستخدمه على نوع القماش (القطن أو الألياف الصناعية أو الملابس الناعمة أو الصوف). والألوان ودرجة حرارة الماء ودرجة الاتساخ. استخدم دوماً مسحوق الغسيل ذا "الرغوة القليلة" المصمَّم خصيصاً للغسالات الأوتوماتيكية. اتبع توصيات الشركة المصنعة لمسحوق الغسيل وفقًا لوزن الملابس ودرجة الاتساخ ودرجة نقاء الماء في منطقتك. وإذا لم تكن تعرف ما إذا كان الماء نقيًا أم لا في منطقتك، اتصل بالهيئة المسؤولة عن الماء.

لا تستخدم منظف صلب أو خشن لأنه قد يتبقى في دورة الشطف لأن ذلك قد يتسبب في أداء الغسالة لدورة الشطف بشكل غير صحيح.أو يتسبب في إعاقة تدفق الماء.




- استخدم منظف سائل معتدل مخصص للملابس الصوفية فقط.
- عند استخدام منظف مسحوق. فقد يبقى على الملابس ويسبب التلف للمادة (الملابس الصوفية).


درج مسحوق الغسيل

ختوى الغسالة على حجيرات منفصلة لتوزيع المسحوق ومنعم الأقمشة. قم بإضافة كافة اللواد الإضافية الخاصة بالغسيل إلى الحجيرة المناسبة قبل بدء تشغيل الغسالة.




- اسحب درج مسحوق الغسيل الموجود على الجانب الأيمن من لوحة التحكم.
- اً. قم بإضافة كمية من مسحوق الغسيل الموصى به مباشرة في حجيرة المسحوق آ قبل تشغيل الغسالة.
- قم بإضافة الكمية الموصى بها من منعم الأقمشة في الحجيرة الخاصة به ﴿ إِذَا

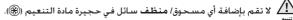


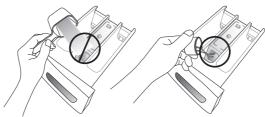


عند استخدام خيار الغسيل الأولي. قم بإضافة الكمية الموصى بها من مسحوق الغسيل في حجيرة الغسيل الأولى 🗓.

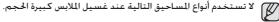

- مساحيق غسيل التي تكون على شكل ألواح أو أقراص
 - مساحيق التي تكون على شكل كرة أو شبكة
- يجب إذابة منعم الأقمشة المركز أو السميك بقليل من الماء قبل صبه في درج التوزيع (لمنع إعاقة تدفق الماء.)
- توخى الحيطة حتى لا تتدفق مادة تنعيم الأقمشة عند قيامك بغلق درج المنظف بعد إضافة مادة تنعيم الأقمشة في حجيرة منظف الشطف.

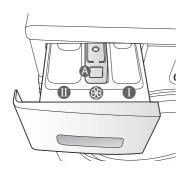

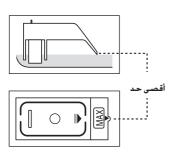









٣٠ غسل الملابس






تنظيف الغسالة وصيانتها

يعمل حفظ الغسالة نظيفة على حسين أدائها، وتجنب الإصلاحات غير الضرورية، وزيادة عمر الغسالة.

تصريف الماء من الغسالة عند الطوارئ

- افصل الغسالة من مصدر الطاقة.
- افتح غطاء المصفاة باستخدام عملة معدنية أو مفتاح.

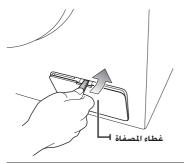

٣. قم بفك براغى غطاء التصريف الطارئ بلفه جهة اليسار.



- قم بإمساك الغطاء في نهاية أنبوب التصريف الطارئ وسحبه ببطء للخارج بمقدار ١٥ سبم.
 - اسمح بتصريف الماء بأكمله ليتدفق في وعاء.



- قم بإعادة إدخال أنبوب التصريف وتثبيت برغي الغطاء مرة أخرى.
 - ل أعد غطاء المصفاة إلى مكانه.



تنظيف الأسطح الخارجية

- امسح الأسطح الخارجية لجهاز الغسالة, بما في ذلك لوحة التحكم بقطعة من القماش الناعم ومسحوق تنظيف منزلي غير
 خادش
 - استخدم قطعة من القماش الناعم لتجفيف الأسطح الخارجية.
 - ٣. لا تصب الماء على الغسالة.







تنظيف الغسالة وصيانتها

تنظيف درج مسحوق الغسيل والجزء الداخلي منه

- اضغط ذراع الإرخاء الموجودة في داخل درج مسحوق الغسيل واسحبه إلى الخارج.
- أ. قم بإزالة الفاصل الخاص بسائل مسحوق الغسيل من درج مسحوق الغسيل

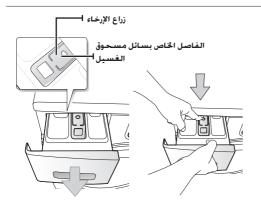

٣. اغسل كافة الأجزاء بالماء الجاري.

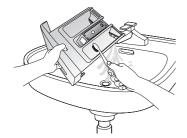

- نظف الجزء الداخلي للدرج باستخدام فرشاة أسنان قديمة.
- ه. ضع الفاصل الخاص بسائل مسحوق الغسيل في مكانه عن طريق دفعه بقوة في الدرج.
 - أعد الدرج إلى مكانه.
 - السُفيل دورة الشُطف دون وجود أي ملابس في الحاوية لإزالة أي مسحوق متبقي.







تنظيف مصفاة الخلفات


توصى Samsung بتنظيف مصفاة الخلفات ٥ أو ١ مرات في العام. أو عند عرض رسالة الخطأ "55" (راجع "تصريف الغسالة عند الطوارئ" في الصفحة السابقة.)

🚺 قبل تنظيف مرشح البقايا، تأكد من نزع قابس طاقة الجهاز.

- قم بإزالة الماء المتبقي أولاً (قم بالرجوع إلى "تصريف الغسالة عند الطوارئ" في
- إذا قمت بفصل المرشح دون تصريف الماء المتبقي. فقد يتساقط للخارج على أنكا قطاك شكل قطرات.
 - افتح غطاء المصفاة باستخدام مفتاح أو قطعة معدنية.
 - أرخ غطاء التصريف عند الطوارئ بلفه إلى اليسار لصرف الماء من الغسالة.
 - أرخ غطاء مصفاة الخلفات.
- أغسل أية أوساخ أو مواد أخرى عالقة في مصفاة الخلفات. تأكد أن مروحة مضخة التصريف الموجودة خلف مصفاة الخلفات غير مسدودة.
 - ضع غطاء مصفاة الخلفات في مكانه.
 - ٧. ضع غطاء المصفاة في مكانه





🚹 لا تفتح غطاء مرشح البقايا أثناء تشغيل الغسالة أو خلال تدفق الماء الساخن للخارج.

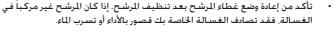

يجب تجميع المرشح تماماً بعد تنظيف المرشح.



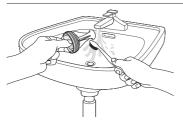

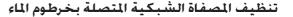

يجب عليك تنظيف المصفاة الشبكية المتصلة بخرطوم الماء مرة كل عام على الأقل. أو عند ظهور رسالة خطأ "4E":

- قم بإيقاف تشغيل مصدر توريد الماء إلى الغسالة.
- افصل الخرطوم عن الجانب الخلفي من الغسالة. قم بتغطية الخرطوم بقطعة من القماش. لمنع تدفق الماء بسبب الضغط العالي في
- باستخدام الزردية. اسحب اللصفاة الشبكية إلى الخارج من طرف الخرطوم بلطف واشطفها بالماء حتى تصبح نظيفة. نظف كذلك الجزأين الداخلي والخارجي للوصلة الملفوفة.
 - أعد المصفاة إلى مكانها.
 - ثبت الخرطوم في الغسالة مرة أخرى.
 - تأكد أن الوصلات محكمة ضد الماء وقم بتشغيل الصنبور.





تنظيف الغسالة وصيانتها _٣٣



تنظيف الغسالة وصيانتها

إصلاح جهاز غسالة متجمد

إذا انخفضت درجة الحرارة إلى أقل من درجة التجمد وجمدت الغسالة:

- افصل الغسالة من مصدر التيار الكهربائي.
- صب الماء الدافئ على صنبور الماء لإرخاء خرطوم توريد الماء.
 - ٣. قم بإزالة خرطوم توريد الماء وانقعه في الماء الدافئ.
- صب الماء الدافئ في حاوية الغسالة وأتركه لمدة ١٠ دقائق.
- أعد توصيل خرطوم توريد الماء إلى صنبور الماء وتأكد من أن توريد الماء والتصريف يتم كما ينبغى.

تخزين الغسالة

إذا كنت بحاجة إلى تخزين الغسالة لمدة طويلة. فمن المستحسن تصريف الماء منها وفصلها. حيث يمكن أن تتلف الغسالة في حالة ترك ماء في الخراطيم والمكونات الداخلية قبل التخزين.

- انتر الدورة 'C yuick (سريع'15) ثم قم بإضافة مادة تبييض في الحجيرة الخاصة بادة التبييض. قم بتشغيل الغسالة من خلال الدورة دون وجود ملابس بها.
 - قم بإيقاف صنابير الماء وافصل خراطيم صنابير الماء.
 - قم بفصل الغسالة عن منفذ التيار الكهربائي. واترك باب الغسالة مفتوحًا للسماح بدخول الهواء داخل الحاوية.



في حالة قيامك بتخزين الغسالة في درجات حرارة خت التجمد. اجعل هناك فرصة لخروج الماء المتبقي في الغسالة قبل استخدامها مرة أخرى.







استكشاف المشاكل وحلها ورموز المعلومات

خمق ما يلي إذا كانت الغسالة...

المشكلة	الحل
لا تعمل	 نأكد من توصيل قابس الغسالة بحصدر التيار الكهربائي. نأكد من إغلاق الباب بإحكام. نأكد من فتح مصدر صنابير الماء. نأكد من الضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت).
عدم وجود ماء أو عدم وجود ماء كافٍ	 افتح الصنبور تماماً. تأكد أن خرطوم توريد الماء غير متجمد. فك ثنيات خراطيم توريد الماء. نظف المصفاة الموجودة على الخرطوم الخاص بمدخل الماء.
هل يوجد مسحوق غسيل في الدرج بعد اكتمال دورة الغسل	 تأكد من تشغيل الغسالة بضغط ماء كاف. تأكد من إضافة مسحوق الغسيل في منتصف درج المسحوق.
تهتز الغسالة أو خُدث صوتاً مرتفعاً	 تأكد من تركيب الغسالة على أرض مستوية. إذا كانت الأرض غير مستوية. اضبط قدم الغسالة حتى تستوي على الأرضية. تأكد من إزالة مسامير الشحن. تأكد من عدم ملامسة الغسالة لأي شيء آخر. تأكد من توزيع وزن الملابس الموجودة في الغسالة.
لا يتم تصريف الماء من الغسالة واأو لا تقم بعملية التجفيف	 فك الثنيات الموجودة في خرطوم التصريف. قلل من استخدام الخراطيم الملتوية. تأكد أن المصفاة الشبكية المتصلة بخرطوم الماء غير مسدودة.
الباب مغلق ولا يمكن فتحه	 تأكد من تصريف كل الماء في الوعاء الأسطواني الغسالة للخارج. تأكد من أن ضوء قفل الباب منطفئ. سيتم انطفاء ضوء قفل الباب بعد عملية التصريف.

في حالة استمرار المشكلة، اتصل بمركز خدمة عملاء Samsung الحلي







استكشاف المشاكل وحلها ورموز المعلومات

رموز المعلومات

عندما تتعرض الغسالة للعطل. قد يظهر أحد رموز العلومات على الشاشة. في حالة حدوث ذلك. الرجاء التحقق من هذا الجدول وجّربة الحلول المقترحة قبل الاتصال بخدمة العملاء.

	الحل	رمز الكود
أغلق الباب.	•	dE
تأكد أن صنبور توريد الماء مفتوح. تأكد من ضغط الماء.		4E
نظف مصفاة الخلفات. تأكد من تركيب خرطوم تصريف الماء بطريقة صحيحة.		5E
وزن الملابس غير موزّع. قم بإعادة توزيع الملابس. في حالة غسيل قطعة واحدة من الملابس. مثل برنس حمام أو جينز. قد لا تكون نتيجة التجفيف النهائي مرضية, وتظهر رسالة خطأ "UE" في إطار العرض.	•	UE
اتصل بخدمة ما بعد البيع.	•	cE / 3E
تعرض هذه الكلمة عندما تكون الدرجة الداخلية للحلة عالية. ستعمل المروحة أوتوماتيكياً وبالتالي عليك فقط الانتظار لحين اختفاء مؤشر Hot (ساخن).	•	Hot
حَدث هذه الحالة عند استشعار كمية كبيرة من الرغوة. ويتم كذلك عرضها عند التخلص من الرغوة. عند الانتهاء من عملية الإزالة. تتم متابعة الدورة الطبيعية (ويعد ذلك إحدى العمليات الطبيعية. هذا الخطأ يهدف إلى الحماية ضد العيوب غير القابلة للكشف عنها.)	•	Sd/Sud
إذا كانت فلطية الطاقة المزودة غير مستقرة. فقد تتوقف الغسالة عن العمل مؤقتاً لحماية أجهزتها الكهربائية. إذا كان يتم إمداد الفلطية الصحيحة للغسالة. فستعاود الدورة العمل أوتوماتيكياً.		Uc

بالنسبة للرموز التي لم تذكر أعلاه. أو في حالة عدم مساهمة الحل المقترح في حل المشكلة. اتصل بمركز خدمة Samsung أو الموزع الحلي المعتمد التابع لـ Samsung.





٣١ استكشاف المشاكل وحلها ورموز المعلومات



جدول الدورة

جدول الدورة

(● حسب اختيار المستخدم)

- 4	ل	سحوق الغسي	LQ.	أقصى وزن (كجم)			
أقصى درجة حرارة (مئوية)	منعم الأقمشة	غسل	غسل أولي	WD0604/WD0602	WD0654/WD0652	WD0704/WD0702	البرنامج
90	•	نعم	•	1,.	٦,۵	٧,٠	Cotton (قطن)
1.	•	نعم	•	٣,٠	۳,۰	٣,٠	Synthetics (اصطناعي)
1.	•	نعم	•	٣,٠	۳,۰	٣,٠	(الجينز) Denim
1.	•	نعم	•	۲,۵	Γ,Δ	۲,۵	Sports Wear(ملابس رياضية)
٤٠	•	نعم	-	۲,۵	Γ ,Δ	۲,۵	Delicates (أنسجة رقيقة)
٤٠	•	نعم	-	۲,۰	۲,۰	۲,٠	Wool (صوف)
٤٠	•	نعم	-	۲,۰	۲,۰	۲,٠	(غسيل يدوي) Handwash
-	-	-	-	1,-	1,•	1,.	Deodorization (إزالة الروائح الكريهة)
-	-	-	-	1,-	1,•	1,.	(التعقيم) Sanitization
-	-	-	-	٣,۵	٣,۵	٣,۵	Drying (التجفيف)
1.	•	نعم	•	٣,٠	۳,۰	r,·	(الغسيل اليومي) Daily Wash
1.	•	نعم	-	٣,٠	۳,۰	٣,٠	(سىرىغ'15) Quick بىرىغ

مدة الدورة	:= -w (اغسیل Intensive	قصوی) (دورة/دقیقة)	سرعة التجفيف (النا	- 4: 11
(دقیقة)	تأجيل التوقف	مكثف)	WD0702/WD0652/WD0602	WD0704/WD0654/WD0604	البرنامج
15.	•	•	١٢٠٠	15	Cotton (قطن)
۹.	•	•	15	15	Synthetics (اصطناعي)
٧٨	•	•	۸۰۰	۸۰۰	Denim (الجينز)
٧٢	•	•	15	15	Sports Wear(ملابس رياضية)
۵٠	•	-	۸۰۰	۸۰۰	Delicates (أنسجة رقيقة)
۳۸	•	-	۸۰۰	۸۰۰	Wool (صوف)
۳۱	•	-	٤٠٠	٤٠٠	(غسيل يدوي) Handwash
59	•	-	-	-	Deodorization (إزالة الروائح الكريهة)
۵۹	•	-	-	-	(التعقيم) Sanitization
11.	•	-	-	-	Drying (التجفيف)
٧٠	•	-	15	15	(الغسيل اليومي) Daily Wash
10	•	-	۸۰۰	۸۰۰	(سريع '15) Quick

- 1. تستغرق دورة الغسيل الأولي مدة أطول بحوالي ١٥ دقيقة.
- أ. تم قياس بيانات مدد الدورات وفقاً للظروف المنصوص عليها في مقياس 60456/EN 60456.
 - قطن عند ۱۰ درجة + برنامج مكثف وهو برنامج متوافق مع مواصفات 60456 EN.
- قد يختلف وقت الدورة في كل منزل عن القيم المبينة في الجدول بسبب الاختلاف في ضغط الماء ودرجة الحرارة الخاصة بتوريد الماء وكمية الغسيل ونوعه.
 - ه. عند خدید وظیفة غسیل مکثف, یتم زیادة مدة الدورة لکل الدورات.





الملحق

جدول العناية بالأقمشة

توضح الرموز التالية تعليمات العناية بالملابس. تتضمن بطاقات العناية أربعة رموز على النحو التالي: غسل. تبييض. جُفيف, وكي, وتنظيف جاف إذا لزم الأمر.

يضمن استخدام هذه الرموز التناسق بين الشركات المصنعة للملابس الحلية والمستوردة. اتبع تعليمات بطاقة العناية لزيادة عمر الملابس وتقليل مشاكل الغسل.

يمكن الكي عند ١٠٠ درجة مئوية بحد أقصى		مواد مقاومة	\square
يحظر الكي	\bowtie	أقمشة ناعمة	\Box
مكن استخدام التنظيف الجاف باستخدام أي مواد مذيبة	A	مِكن الغسل عند ٩٥ درجة مئوية	\(\hat{95}\)\(\hat{95}\)
التنظيف الجاف بالبروكلوريد أو الوقود الخفف أو الكحول النقي أو R113 فقط	P	مِكن الغسل عند ٦٠ درجة مئوية	60 60
التنظيف الجاف بوقود الطائرات أو الكحول النقي أو R113 فقط	F	يمكن الغسل عند ٤٠ درجة مئوية	40 40
يحظر استخدام التنظيف الجاف	\otimes	يمكن الغسل عند ٣٠ درجة مئوية	30 30
جَفف وهي مفرودة - جَفف وهي مفرودة		تغسل باليد	
يمكن تعليقها لتجف		تنظيف جاف فقط	\bowtie
جَفيف الملابس وهي معلقة على حمالة -		يمكن استخدام مادة تبييض مع الماء البارد	CI
جَفيف بالتدوير. حرارة عادية	\odot	يحظر استخدام مادة تبييض	×
جّفيف بالتدوير. حرارة خفيفة	\odot	يمكن الكي عند ٢٠٠ درجة مئوية بحد أقصى	
يحظر فخفيفها بالتدوير		يمكن الكي عند ١٥٠ درجة مئوية بحد أقصى	<u></u>

حماية البيئة

- هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير. إذا قررت التخلص من هذا الجهاز. يرجى مراعاة القوانين الحلية الخاصة بالتخلص من النفايات. اقطع سلك التيار بحيث لا يمكن توصيل الجهاز بمصدر طاقة. قم بإزالة الباب لمنع تعرض الحيوانات أو الأطفال الصغار للاحتباس داخل الجهاز.
 - لا تضع مسحوق غسيل أكثر من الكمية المبينة في إرشادات الشركة المصنعة لمسحوق الغسيل.
 - استخدم مواد إزالة البقع ومواد التبييض قبل دورة الغسل عند الحاجة فقط.
 - وفر الماء والكهرباء من خلال إجراء الغسل بأوزان كاملة (تختلف الكمية وفقاً للبرنامج المستخدم).

إعلان التوافق

يتوافق هذا الجهاز مع مقاييس السلامة الأوروبية EC directive 93/68 و EN Standard 60335.







المواصفات

النوع			غسالة ملابس أمامية التحميل							
الأبعاد			WD0604/WD0602 WD0654/WD0652 WD0704/WD0702 lta-ci - ۱۱۰ م × الارتفاع ۸۶۱ م			WD0604				
ضغط الماء	الم ۱۰۰ کیلوباسکال ۸۰۰ کیلوباسکال									
			/WD0652 WD0704/WD0702		WD0654	WD0604/WD0602				
كمية الماء	۷۵ لتر		٧٥	لتر	الا لتر					
:			/D0702	WD0704/W	/WD0652	WD0654	/WD0602	WD0604		
الوزن الصافي			١٥	کجم	۵۱ ک	جم	۵۱ ک	جم		
سعة الغسل والتجفيف			۷٫۰ کجم (ملابس مجففة)	1,۵ کجم (ملا	بس مجففة)	۱٫۰ کجم (ملا	بس مجففة)		
سعة التجفيف			" ,Δ	اكجم	۳٫۵ کجم		۳٫۰ کجم			
	الطراز		/D0702	WD0704/W	WD0654/WD0652		WD0604/WD0602			
			۱۱۰ فولت	۱۵۰ وات	۱۵۰ وات		۱۵۰ وات			
	اك	فسل	۱٤٠ فولت	۱۵۰ وات	10.	وات	10.	وات		
استهلاك الطاقة	1 -11	- 11	۱۱۰ فولت	۲۰۰۰ وات	٢٠٠٠	وات	٢٠٠٠	وات		
	الغسل والتسخين		۱۲۰ فولت	۲٤۰۰ وات	۲٤۰۰	وات	۲٤۰۰	وات		
		الطراز	WD0704	WD0702	WD0654	WD0652	WD0604	WD0602		
	زر څديد	١٣٠ فولط	۳۵۰ وات	۳۰۰ وات	۳۵۰ وات	۳۰۰ وات	۳۵۰ وات	۳۰۰ وات		
	الضخ		3 775		۳۶ وات					
	الطراز		/D0702	WD0704/W	/WD0652	WD0654	WD0604/WD0602			
العبوة الوزن	الغلاف الورقي		۱٫۱ کجم		۱٫۱ کجم		۱٫۱ کجم			
	غلاف بلاستيكي		١,١ كجم		۱٫۱ کجم		١,١ كجم			
و المراجعة	الطراز		WD0704/WD0654/WD0604		WDO	00602 WE		WD0702/WD0652/WD0602		WDO
دورات التجفيف	دورة في الدقيقة		15		15					

قد يتعرض شكل المنتج ومواصفاته للتغيير دون إخطار مسبق لأغراض خسين المنتج.





هل لديك أسئلة أو تعليقات؟

أو قم بزيارة موقعنا على الإنترنت على	اتصل بـ	البلد
www.samsung.com/ae	800-SAMSUNG (726-7864)	U.A.E

کود رقم. DC68-02829C_AR

(